

DUCAR

Diagramme de pièces *Parts diagram*




Le modèle peut différer légèrement de la photo / *The model may differ slightly from the picture*

DJ190F-D

Moteur *Engine*

DJ190F-D

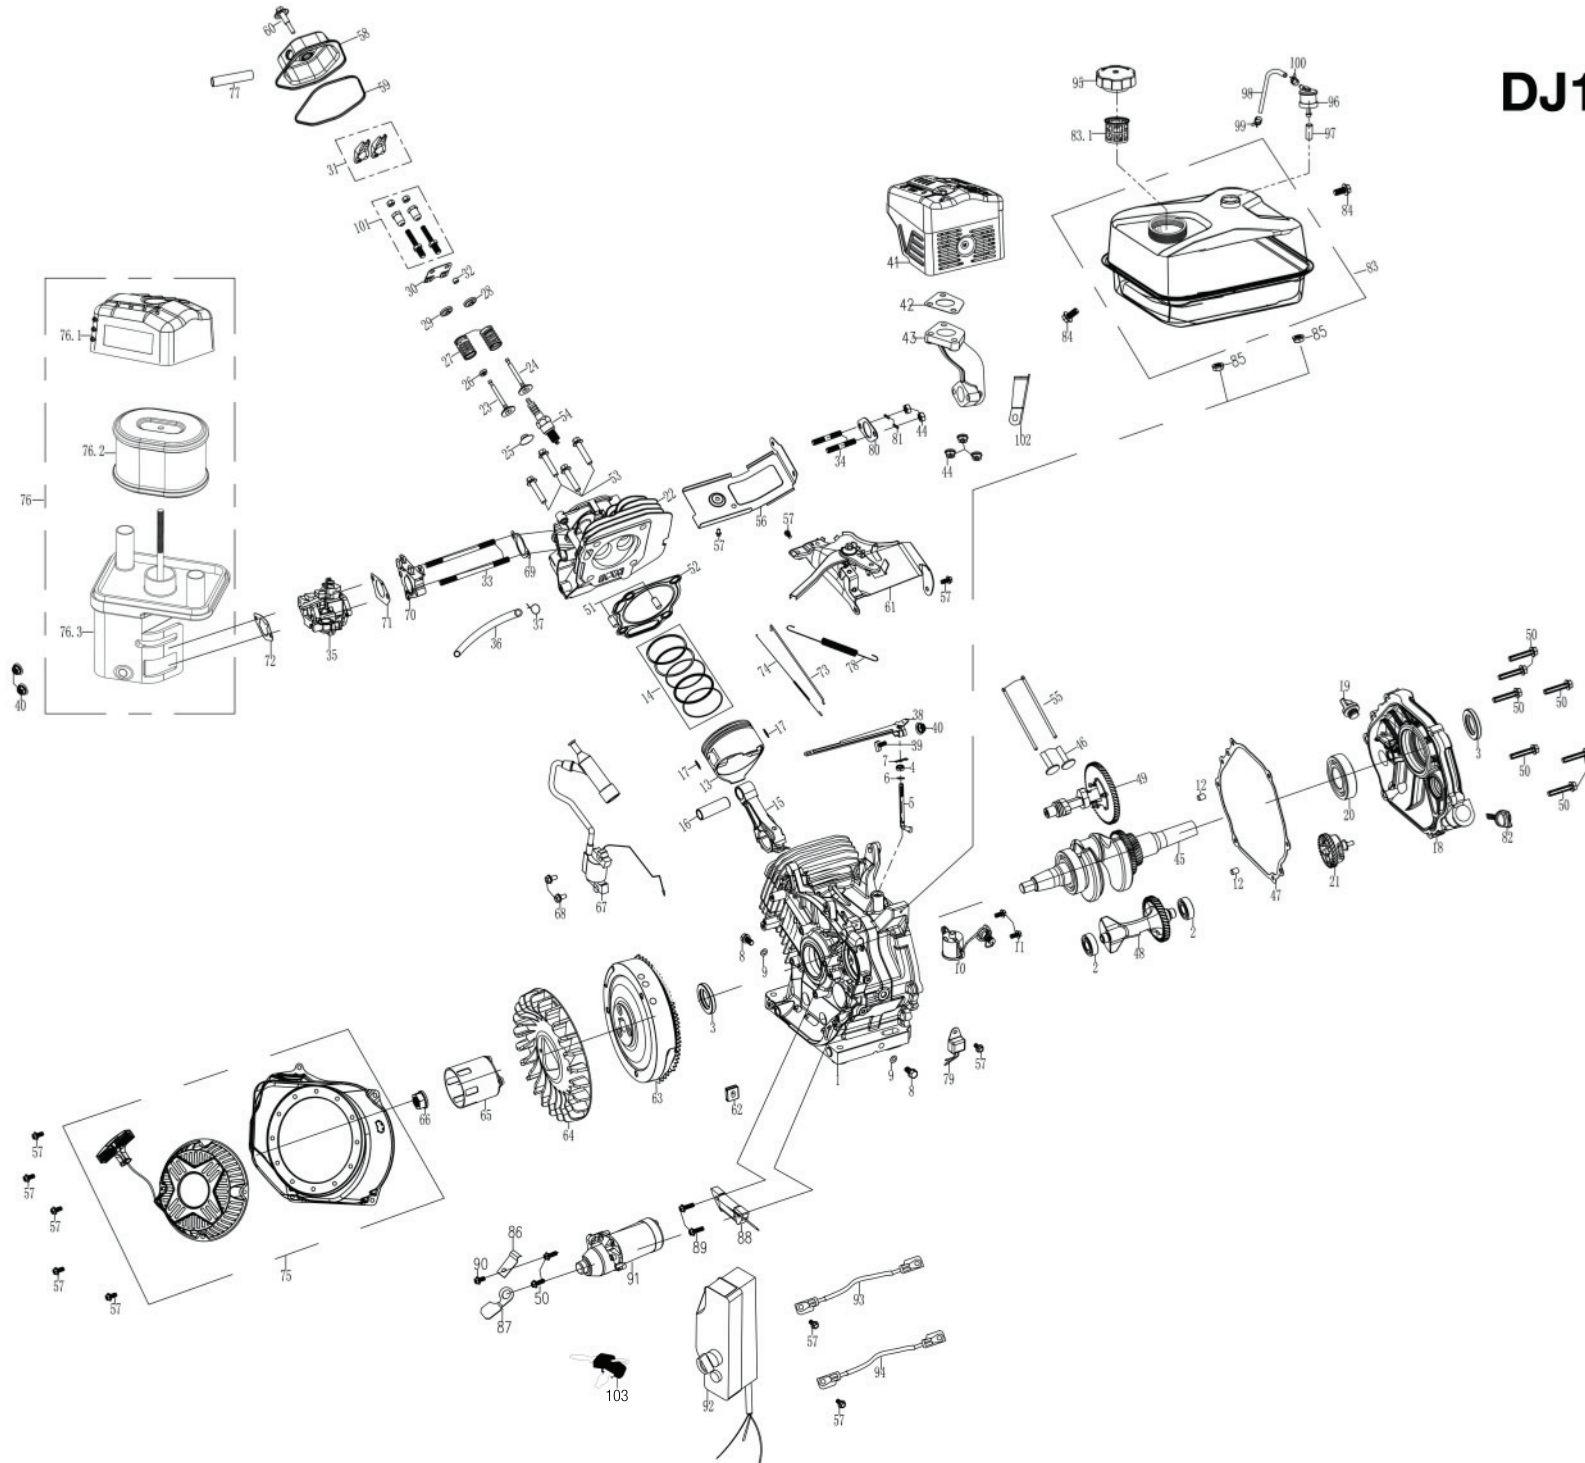

DJ190F-D list of spare parts / Liste des pièces			
Use prefix: DUP / Utilisez ce préfixe : DUP			
NO.	Code	Description	Qty
1	260213	CRANKCASE	1
2	93002	BALL BEARING	2
3	93511	OIL SEAL	2
4	93514	SEAL,GOVERNOR ARM SHAFT	1
5	263901	SHAFT,GOVERNOR ARM	1
6	96806	WASHER,GOVERNOR ARM SHAFT	1
7	263902	PIN,LOCK	1
8	91817	BOLT, DRAIN PLUG	2
9	94004	WASHER,DRAIN PLUG	2
10	265102	SWITCH ASSEMBLY,OIL LEVEL	1
11	91329	BOLT M6X16	2
12	240901	DOWEL PIN,CASECOVER	2
13	261205	PISTON	1
14	261604	SCRAPER RING SET ,PISTON	1
15	261503	ROD ASSEMBLY., CONNECTING	1
16	265501	PIN, PISTON	1
17	261301	CLIP, PISTON	2
18	260101	COVER ASSEMBLY, CRANKCASE	1
19	261401	OIL PLUG	1
20	93015	BALL BEARING	1
21	264301	GOVERNOR ASSEMBLY	1
22	261002	90° EX. MANIFOLD	1
23	261701	VALVE,IN	1
24	265901	VALVE EXHAUST	1
25	261807	RETURNER,INTAKE VALVE	1
26	93513	OIL SEAL,VALVE	1
27	266001	SPRING,VALVE	2
28	261801	SEAT, VALVE SPRING,IN	1
29	261803	SEAT, VALVE SPRING,EX	1
30	262201	PLATE,PUSH ROD GUIDE	1
31	262101	ROCKER ASSY	2
32	261806	ROTATOR	1
33	91013	BOLT, STUD	2
34	91015	BOLT, STUD	2
35	262809	CARBURETOR ASSEMBLY	1
36	95413	FUEL LINE	1
37	94404	CLIP,FUEL LINE	1
38	264001	GOVERNOR ARM	1
39	91822	BOLT,GOVERNOR ARM	1
40	90016	NUT M6	3
41	263713	MUFFLER COMP	1
42	96001	GASKET,EXHAUST PIPE	1
43	95203	EXHAUST PIPE	1
44	90011	NUT M8	5
45	260323	CRANKSHAFT ASSEMBLY	1
46	266101	LIFTER,VALVE	2
47	96072	PACKING,CASECOVER	1

DJ190F-D list of spare parts / Liste des pièces			
Use prefix: DUP / Utilisez ce préfixe : DUP			
48	260301	BALANCING SHAFT	1
49	262012	CAMSHAFT ASSEMBLY	1
50	91348	BOLT M8X35	9
51	260901	PIN, DOWEL	2
52	96089	GASKET,CYLINDER HEAD	1
53	91321	BOLT M10X80	4
54	97108	SPARK PULG	1
55	261901	ROD,PUSH	2
56	260501	SHROUD	1
57	91325	BOLT M6X12	11
58	261104	COVER COMP,CYLINDER HEAD	1
59	96075	PACKING,HEADCOVER	1
60	91819	LOCK BOLT	1
61	264401	SHROUD ASSY,UPPER	1
62	269901	RUBBER, STARTER ASSY	1
63	260402	FLYWHEEL ASSEMBLY	1
64	264601	FAN,RECOIL STARTER	1
65	264501	PULLEY,STARTER	1
66	90004	NUT	1
67	97518	IGNITION COIL ASSY	1
68	91331	BOLT M6X25	2
69	96078	PACKING,INTAKE	1
70	262301	INSULATOR,CARBURETOR	1
71	96081	PACKING,CARBURETOR	1
72	94227	SPACER,CARBURETOR	1
73	262701	ROD,GOVERNOR	1
74	264201	SPRING,THROTTL RETURN	1
75	264724-026	RECOIL STARTER ASSEMBLY	1
76	262917	AIR CLEANER ASSEMBLY	1
76,1	5127	COVER, AIR CLEANER	1
76,2	5128	ELEMENT,AIR CLEANER	1
76,3	5129	BOTTOM COVER,AIR CLEANER	1
77	95605	TUBE,BREATHER	1
78	264102	SPRING,GOVERNOR	1
79	245104	AMPLIFIER	1
80	96083	PACKING,EXHAUST	1
81	94206	SPRING WASHER	2
82	265601	DIPSTICK	1
83	263113-026	FUEL TANK ASSEMBLY	1
83,1	5126	FUEL FILTER	1
84	91346	BOLT M8X25	2
85	90018	NUT M8	2
86	249901	CLAMPER CORD A	1
87	269902	CLAMPER CORD A	1
88	97210	CHARGE COIL	1
89	91333	BOLT M6X28	2
90	91340	BOLT M6X8	1
91	97406	STARTING MOTOR ASSEMBLY	1
92	265023-026	CONTROL BOX ASSEMBLY	1
93	512017	NEGATIVE LEAD	1

DJ190F-D list of spare parts / Liste des pièces			
Use prefix: DUP / Utilisez ce préfixe : DUP			
94	512007	POSITIVE LEAD	1
95	519201	FUEL TANK CAP COMP	1
96	245405	MANUAL CHOKE ASSEMBLY	1
97	95903		1
98	95308	CONNECTING PIPE	1
99	94408	CLIP,FUEL LINE	1
100	94409	CLIP,FUEL LINE	1
101	91818	Adjuster Rocker Arm	2
102	262603	BRACKET	1
103	999999	KEY	2