

# DUCAR

## Parts diagram



---



The model may differ slightly from the picture


## **DUEPT80** 3" Ducar Trash pump

# DPT80

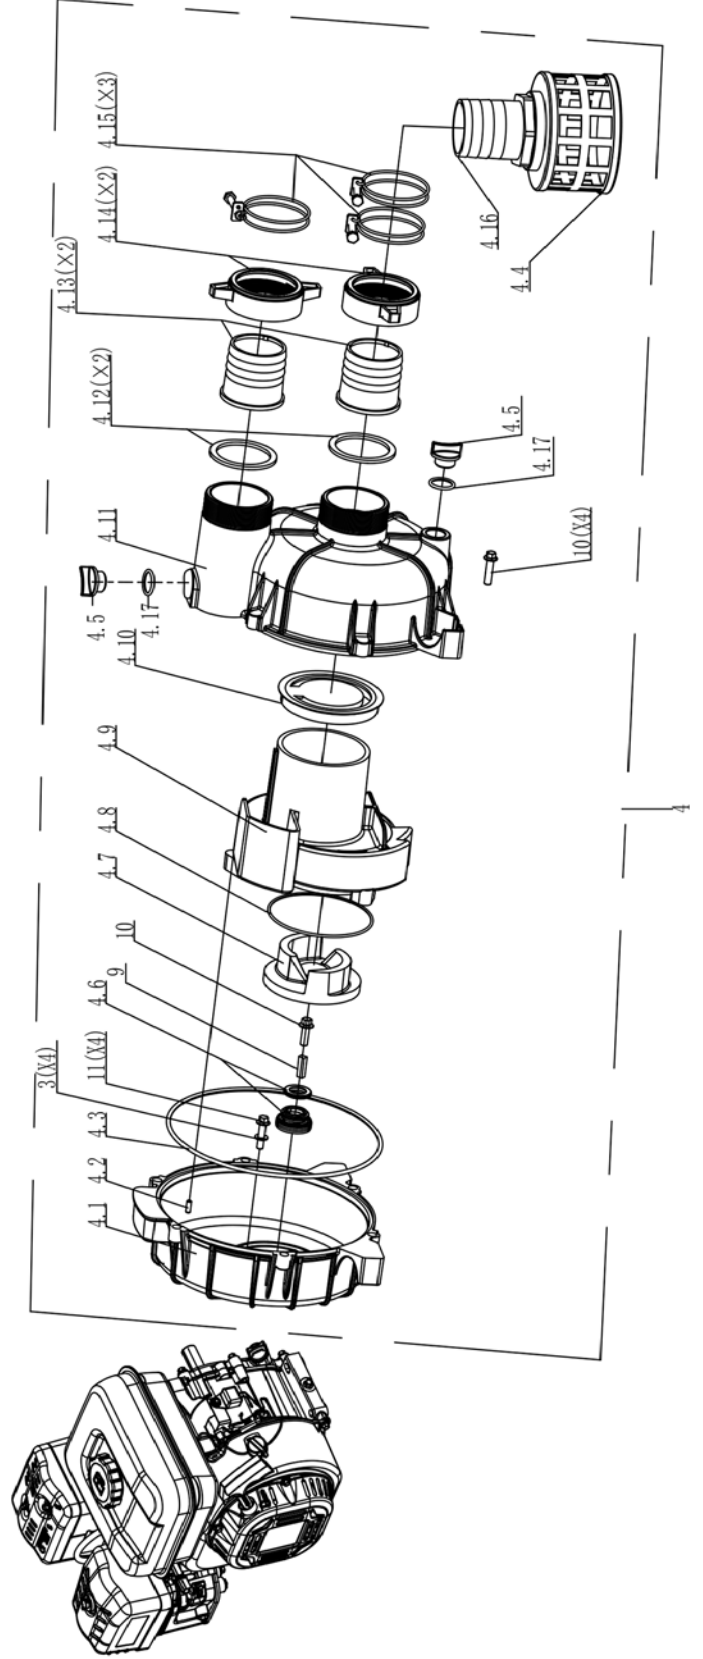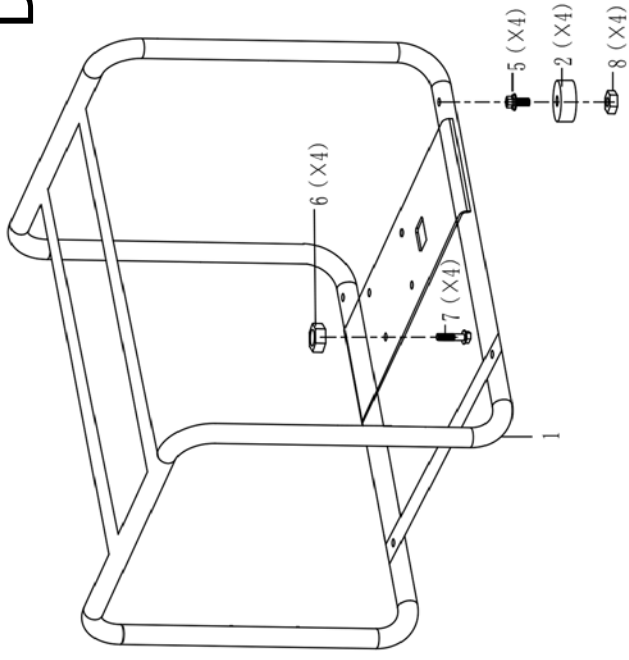

	<b>Part number</b>	<b>Description</b>	<b>Quantity</b>
1	DUP808316-010	FRAME	1
2	DUP804004	RUBBER DAMPING BRACKET	4
3	DUP94257	FLAT WASHER $\Phi 8 \times \Phi 16 \times 1.5$ (AL)	4
4	DUP801040	WATER PUMP ASSEMBLY	1
4.1	DUP7323	PUMP BODY SEAT	1
4.2	DUP7324	THE ELASTIC PIN 8 X20 PHI	1
4.3	DUP7325	SEALING RING	1
4.4	DUP7333	SCREEN	1
4.5	DUP7220	PLUG	2
4.6	DUP7235	SEALING RING	1
4.7	DUP7335	THE IMPELLER	1
4.8	DUP7328	SEALING RING	1
4.9	DUP7329	VOLUTE	1
4.10	DUP7330	INLET VALVE	1
4.11	DUP7331	PUMP BODY	1
4.12	DUP7309	SEALING RING	2
4.13	DUP7310	HOSE INTERFACE	2
4.14	DUP7319	UNION NUT	2
4.15	DUP7312	EMBRACE HOOP	3
4.16	DUP7334	MESH JOINT	1
4.17	DUP7219	PACKING RING	2
5	DUP91335	BOLT M6X35	4
6	DUP90018	DISC NUT M8	4
7	DUP91348	BOLT WITH DISC M8X35	4
8	DUP90023	SELF-LOCKING NUT M6	4
9	DUP246509	THE CRANKSHAFT FLAT KEY	1
10	DUP91214	IMPERIAL BOLTS	5
11	DUP91347	BOLT M8X30	4

# DPT80

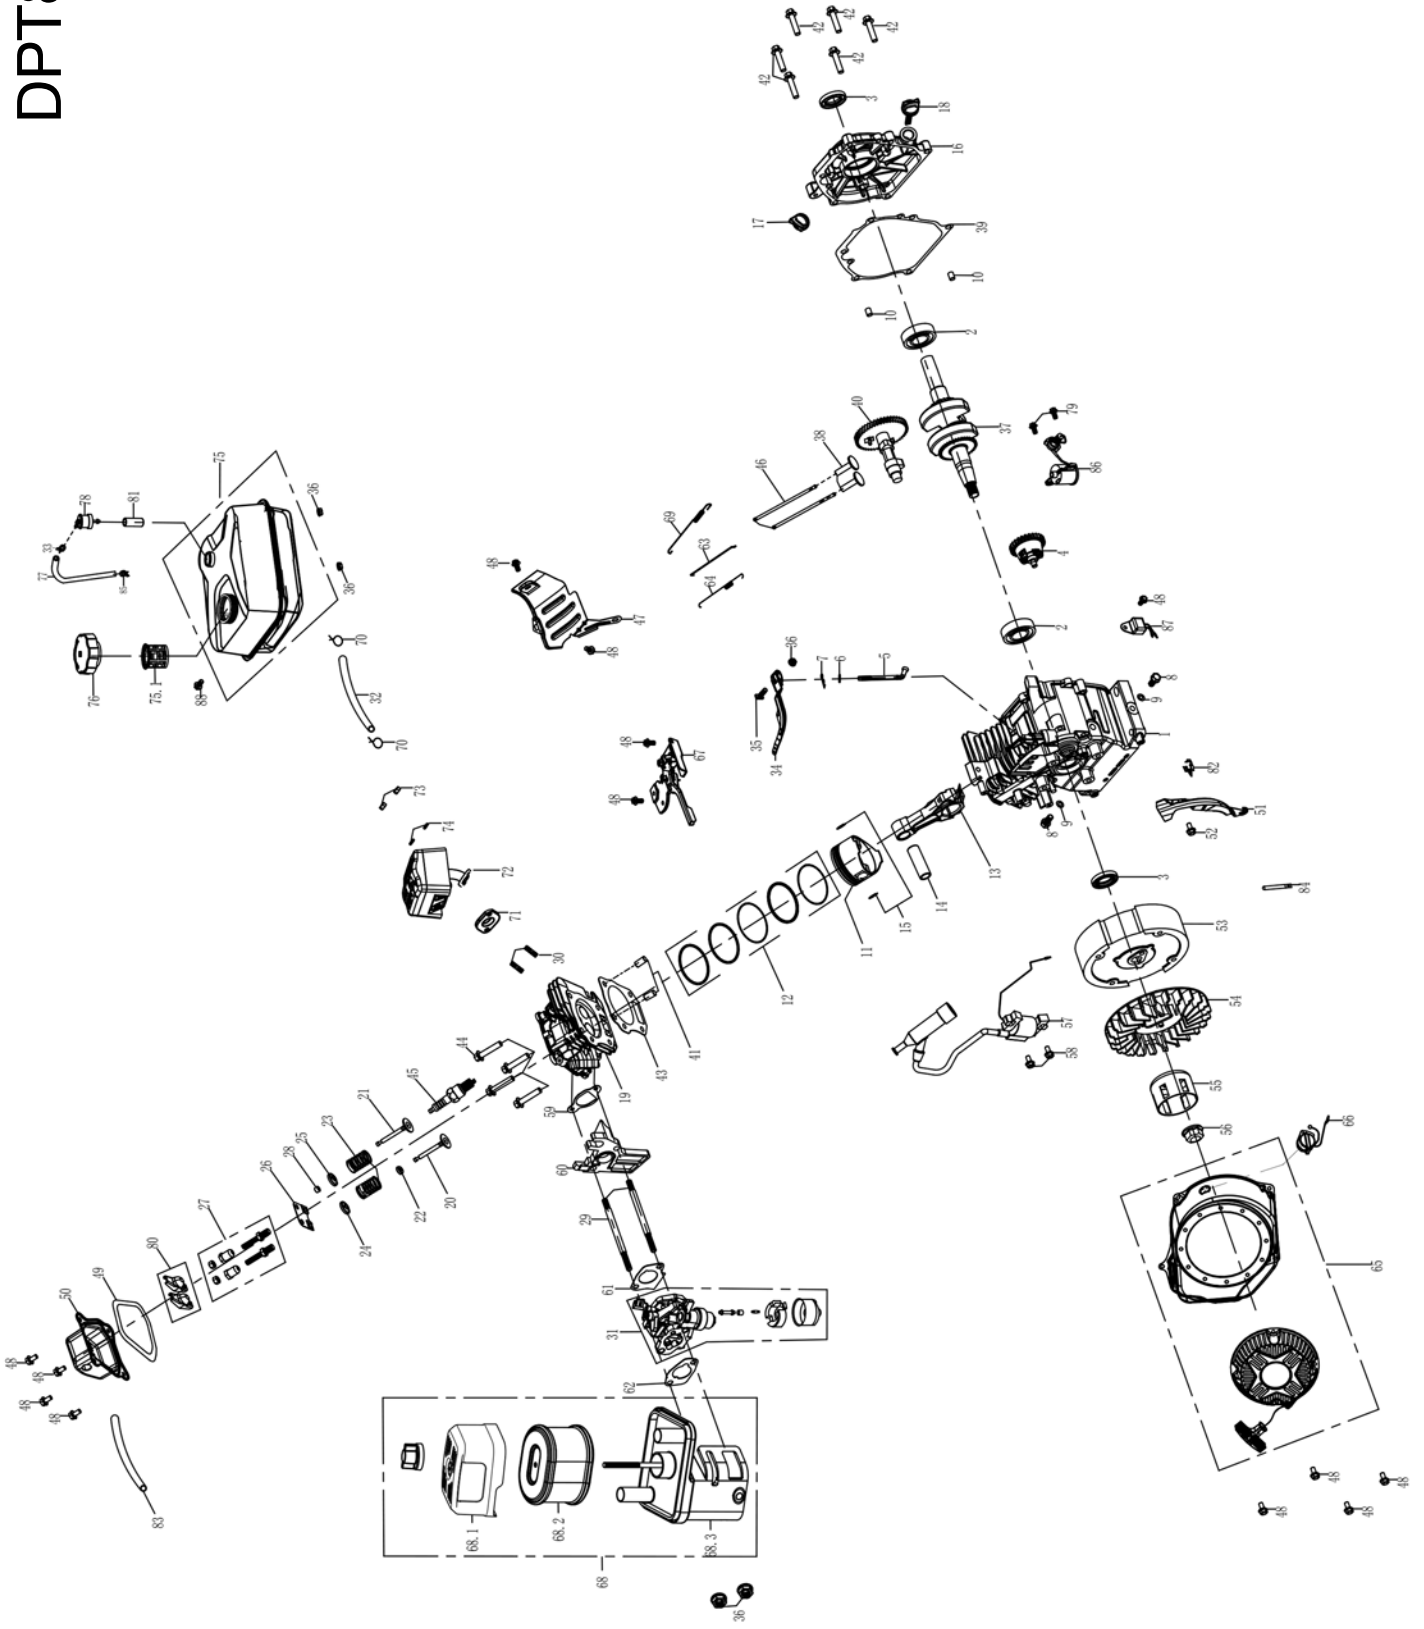

	<b>Part number</b>	<b>Description</b>	<b>Quantity</b>
1	DUP240210	CRANKCASE	1
2	DUP93009	BALL BEARING	2
3	DUP93507	OIL SEAL	2
4	DUP244302	GOVERNOR ASSEMBLY	1
5	DUP243901	SHAFT,GOVERNOR ARM	1
6	DUP96804	WASHER,GOVERNOR ARM SHAFT	1
7	DUP243902	PIN,LOCK	1
8	DUP91816	BOLT, DRAIN PLUG	2
9	DUP94007	WASHER, DRAIN PLUG	2
10	DUP240901	DOWEL PIN, CASECOVER	2
11	DUP241208	PISTON	1
12	DUP241606	SCRAPER RING SET, PISTON	1
13	DUP241503	ROD ASSEMBLY, CONNECTING	1
14	DUP245503	PIN, PISTON	1
15	DUP241301	CLIP, PISTON	2
16	DUP240104	COVER ASSEMBLY, CRANKCASE	1
17	DUP241401	OIL PLUG	1
18	DUP245601	DIPSTICK	1
19	DUP241011	CYLINDER HEAD	1
20	DUP241704	VALVE,IN	1
21	DUP245904	VALVE EXHAUST	1
22	DUP241806	RETURNER,INTAKE VALVE	1
23	DUP246001	SPRING,VALVE	2
24	DUP241801	SEAT, VALVE SPRING,IN	1
25	DUP241802	SEAT, VALVE SPRING,EX	1
26	DUP242202	PLATE,PUSH ROD GUIDE	1
27	DUP91818	ROCKER ARM TIGHTENINIG BOLTS	2
28	DUP241804	ROTATOR	1
29	DUP91006	BOLT, STUD	2
30	DUP91007	BOLT, STUD	2
31	DUP242816	CARBURETOR ASSEMBLY	1
32	DUP95405	FUEL LINE	1
33	DUP94408	CLIP,FUEL LINE	1
34	DUP244001	GOVERNOR ARM	1
35	DUP91822	BOLT,GOVERNOR ARM	1
36	DUP90016	NUT M6	5
37	DUP240346	CRANKSHAFT ASSEMBLY	1
38	DUP246102	LIFTER,VALVE	2
39	DUP96041	PACKING,CASECOVER	1
40	DUP242003	CAMSHAFT ASSEMBLY	1
41	DUP240905	PIN, DOWEL	2
42	DUP91347	BOLT M8X30	6

43	DUP96058	GASKET,CYLINDER HEAD	1
44	DUP91359	BOLT M8X60	4
45	DUP97108	SPARK PULG	1
46	DUP241901	ROD,PUSH	2
47	DUP240501	SHROUD	1
48	DUP91325	BOLT M6X12	13
49	DUP96045	PACKING,HEADCOVER	1
50	DUP241107	COVER COMP,CYLINDER HEAD	1
51	DUP245702	WIND SHIELD COMP.	1
52	DUP91330	BOLT M6X20	1
53	DUP240401	FLYWHEEL ASSEMBLY	1
54	DUP244601	FAN,RECOIL STARTER	1
55	DUP244502	PULLEY,STARTER	1
56	DUP90003	NUT	1
57	DUP97514	IGNITION COIL ASSEMBLY	1
58	DUP91331	BOLT M6X25	2
59	DUP96047	PACKING,INTAKE	1
60	DUP242301	INSULATOR,CARBURETOR	1
61	DUP96051	PACKING,CARBURETOR	1
62	DUP94229	SPACER,CARBURETOR	1
63	DUP242701	ROD,GOVERNOR	1
64	DUP244201	SPRING,THROTTLE RETURN	1
65	DUP244740-026	RECOIL STARTER ASSEMBLY	1
66	DUP245205	SWITCH ASSEMBLY	1
67	DUP244401	SHROUD ASSY,UPPER	1
68	DUP242937	AIR CLEANER ASSEMBLY	1
68,1	DUP5208	COVER, AIR CLEANER	1
68,2	DUP5209	ELEMENT,AIR CLEANER	1
68,3	DUP5210	BOTTOM COVER,AIR CLEANER	1
69	DUP244101	SPRING,GOVERNOR	1
70	DUP94404	CLIP,FUEL LINE	2
71	DUP96054	PACKING,EXHAUST	1
72	DUP243737	MUFFLER COMP	1
73	DUP90011	NUT M8	2
74	DUP94206	SPRING WASHER	2
75	DUP243126-026	FUEL TANK ASSEMBLY	1
75.1	DUP5121	FUEL FILTER	1
76	DUP519201	FUEL TANK CAP COMP	1
77	DUP95302	CONNECTING PIPE	1
78	DUP245405	MANUAL CHOKE ASSEMBLY	1
79	DUP91329	BOLT M6X16	2
80	DUP242101	ROCKER ARM	2

81	DUP95903	VENTILATION TUBE PROTECTOR	1
82	DUP240801	CLIP	1
83	DUP95603	TUBE,BREATHER	1
84	DUP599601	CLIP,WIRE HARNESS	1
85	DUP94409	CLIP,FUEL LINE	1
86	DUP245102	SWITCH ASSEMBLY,OIL LEVEL	1
87	DUP245104	AMPLIFIER	1
88	DUP91333	BOLT M6X28	1