


DUCAR

Equipment parts manual

Model : DUEWBT-48V
Electric Powered Wheelbarrow



Picture may not reflect the exact model

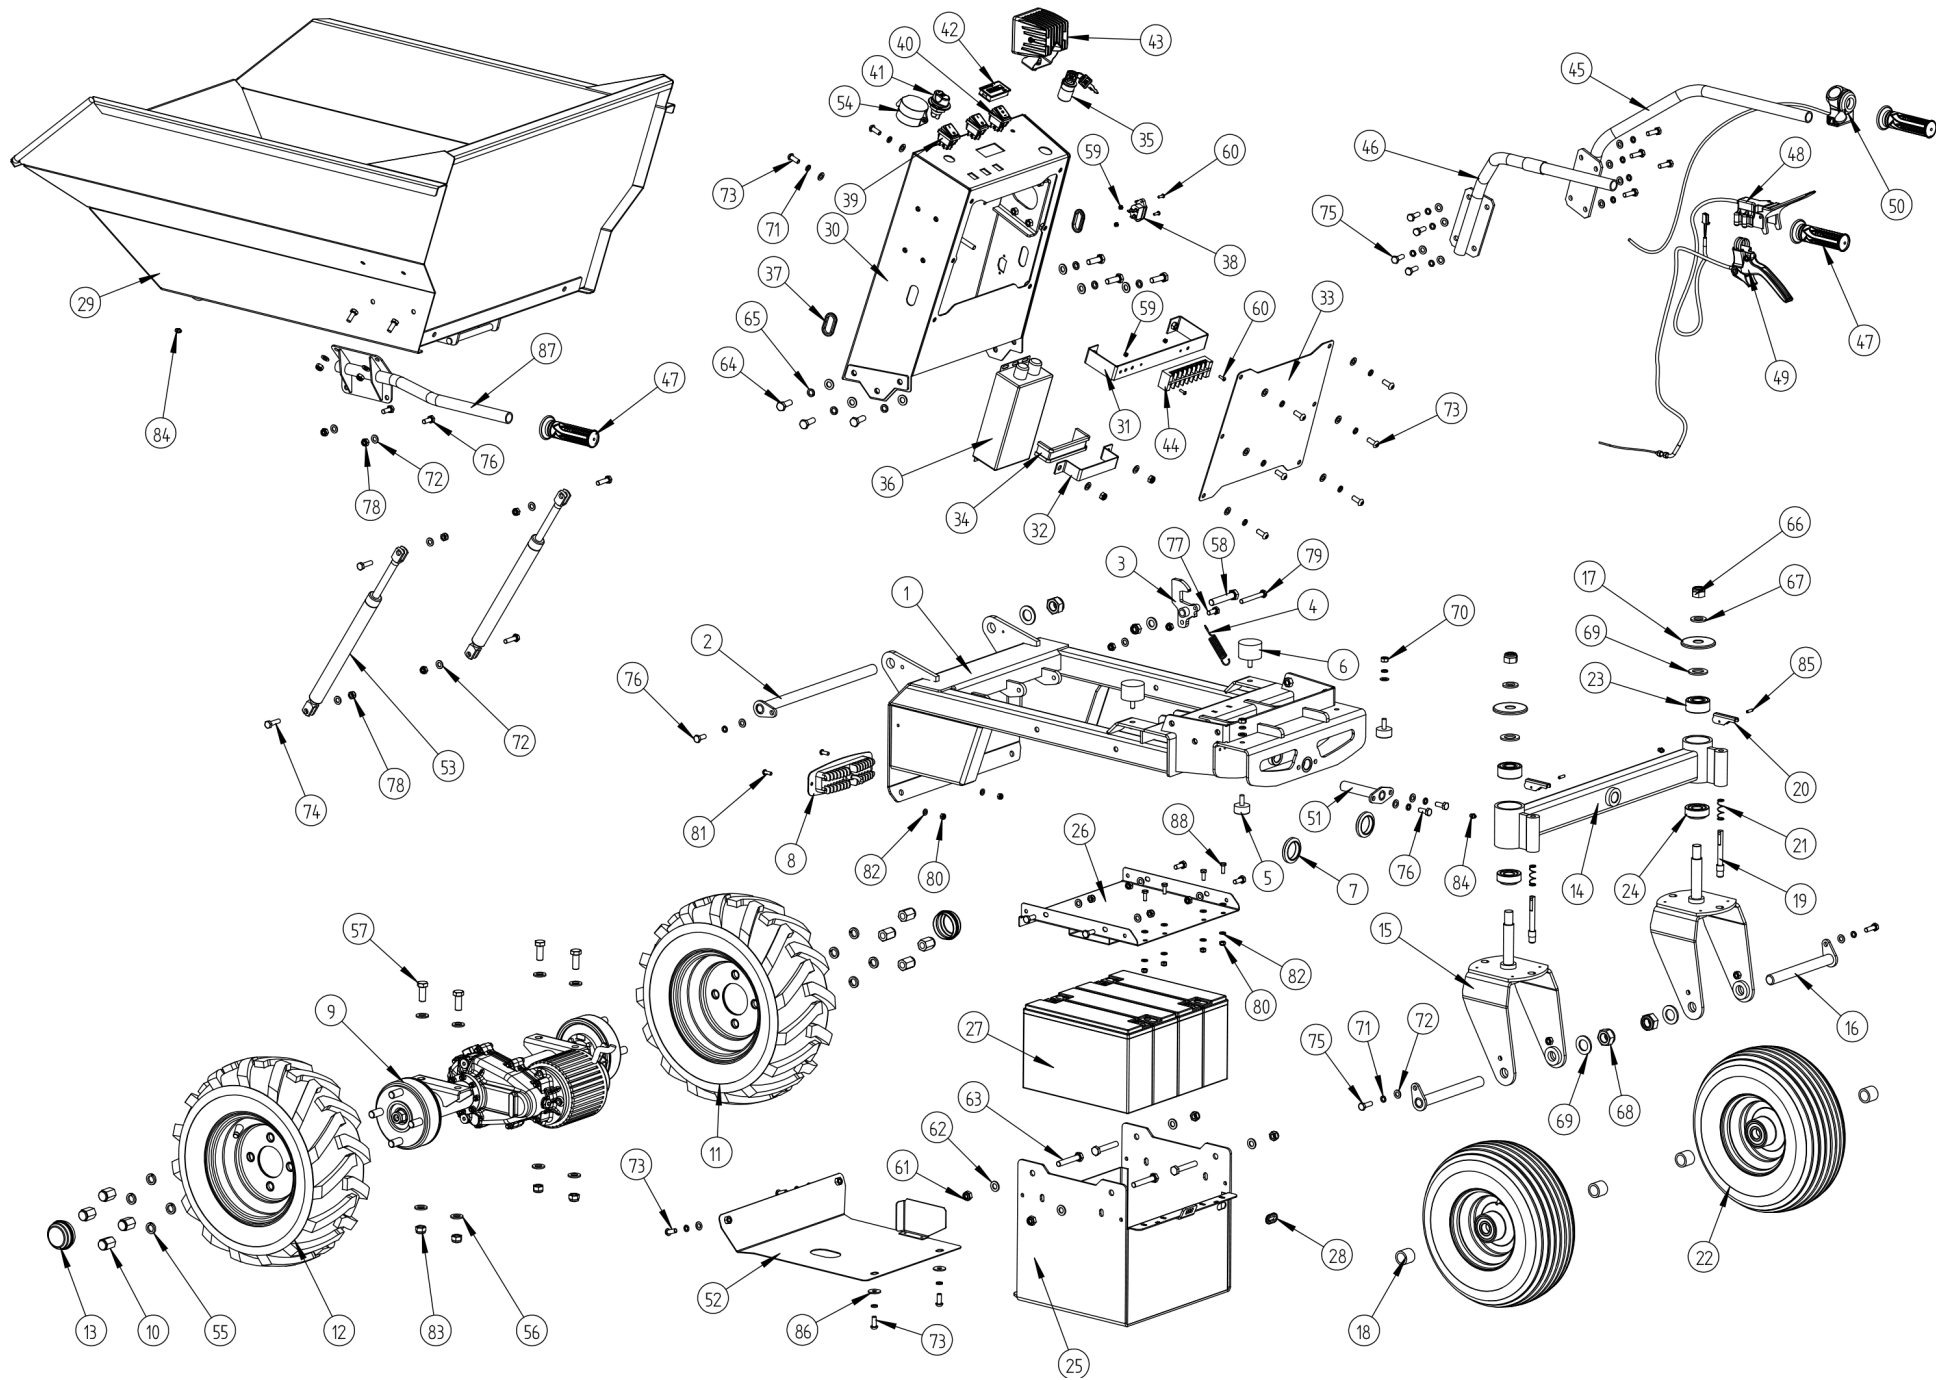

No.	Code	Description	Qty
1	DUPWBT-48V-1	Chassis	1
2	DUPWBT-48V-2	Tipping bucket shfat	1
3	DUPWBT-48V-3	Bucket link	1
4	DUPWBT-48V-4	Spring	1
5	DUPWBT-48V-5	Rubber shock pad	2
6	DUPWBT-48V-6	Rubber mat	2
7	DUPWBT-48V-7	Protective ring	2
8	DUPWBT-48V-8	LED Light	1
9	DUPWBT-48V-9	Transaxle	1
10	DUPWBT-48V-10	Wheel hub nut M14	8
11	DUPWBT-48V-11	16x6.5-8 Wheel	1
12	DUPWBT-48V-12	16x6.5-8 Wheel	1
13	DUPWBT-48V-13	Dust cap	2
14	DUPWBT-48V-14	Steering beam	1
15	DUPWBT-48V-15	Steering bracket	2
16	DUPWBT-48V-16	Wheel axle	2
17	DUPWBT-48V-17	End cap	2
18	DUPWBT-48V-18	Axle sleeve	4
19	DUPWBT-48V-19	Steering bracket pin	2
20	DUPWBT-48V-20	Cam handle	2
21	DUPWBT-48V-21	Spring	2
22	DUPWBT-48V-22	13x5.00-6 Wheel	2
23	DUPWBT-48V-23	Bearing 3204-2RS	2
24	DUPWBT-48V-24	Bearing 32204	1
25	DUPWBT-48V-25	Battery pack	1
26	DUPWBT-48V-26	Waterproof cover board	1
27	DUPWBT-48V-27	32Ah 12V Battery	4
28	DUPWBT-48V-28	Protective ring	1
29	DUPWBT-48V-29	Dumper box	1
30	DUPWBT-48V-30	Control console	1
31	DUPWBT-48V-31	Terminal board	1
32	DUPWBT-48V-32	Controller fixed plate	1
33	DUPWBT-48V-33	Controller cover plate	1
34	DUPWBT-48V-34	Rubber strap	1
35	DUPWBT-48V-35	Electric lock	1
36	DUPWBT-48V-36	Controller	1
37	DUPWBT-48V-37	Protective ring	2
38	DUPWBT-48V-38	Socket	1
39	DUPWBT-48V-39	Rocker switch for light	2
40	DUPWBT-48V-40	Rocker switch 3 position	1
41	DUPWBT-48V-41	Power switch 50A	1

42	DUPWBT-48V-42	Voltmeter	1
43	DUPWBT-48V-43	LED Light	1
44	DUPWBT-48V-44	TB 6008 Line bank	1
45	DUPWBT-48V-45	Handle bar right	1
46	DUPWBT-48V-46	Handle bar left	1
47	DUPWBT-48V-47	Grip	3
48	DUPWBT-48V-48	Safety control handle	1
49	DUPWBT-48V-49	Tipping bucket handle	1
50	DUPWBT-48V-50	Throttle handle	1
51	DUPWBT-48V-51	Gas spring	2
52	DUPWBT-48V-52	Spring washer 14	8
53	DUPWBT-48V-53	Flat washer 12	9
54	DUPWBT-48V-54	Hex bolt M12×30	4
55	DUPWBT-48V-55	Hex bolt M12×65	1
56	DUPWBT-48V-56	Hex lock nut M4	4
57	DUPWBT-48V-57	Hex socket screw M4×12	4
58	DUPWBT-48V-58	Hex lock nut M10	4
59	DUPWBT-48V-59	Flat washer 10	10
60	DUPWBT-48V-60	Hex bolt M10×60	4
61	DUPWBT-48V-61	Hex bolt M10×30	6
62	DUPWBT-48V-62	Spring washer 10	6
63	DUPWBT-48V-63	Hex socket screw M16	2
64	DUPWBT-48V-64	Flat washer 16	2
65	DUPWBT-48V-65	Cotter pin 4×45	1
66	DUPWBT-48V-66	Hex bolt M20×130	1
67	DUPWBT-48V-67	Hex lock nut M20	3
68	DUPWBT-48V-68	Hex nut M20	1
69	DUPWBT-48V-69	Flat washer 20	5
70	DUPWBT-48V-70	Hex nut M8	2
71	DUPWBT-48V-71	Spring washer 8	22
72	DUPWBT-48V-72	Flat washer 8	37
73	DUPWBT-48V-73	Hex socket screw M8×20	8
74	DUPWBT-48V-74	Hex bolt M8×30	4
75	DUPWBT-48V-75	Hex bolt M8×25	10
76	DUPWBT-48V-76	Hex bolt M8×20	8
77	DUPWBT-48V-77	Hex bolt M8×20	1
78	DUPWBT-48V-78	Hex lock nut M8	12
79	DUPWBT-48V-79	Hex bolt M8×65	1
80	DUPWBT-48V-80	Hex lock nut M6	2
81	DUPWBT-48V-81	Hex socket screw M6×16	2
82	DUPWBT-48V-82	Flat washer 6	2
83	DUPWBT-48V-83	Hex lock nut M12	5

84	DUPWBT-48V-84	Oil filling cup M6	3
85	DUPWBT-48V-85	Elastic cylindrical pin 4.5×16	2
86	DUPWBT-48V-86	Gasket 8	2
87	DUPWBT-48V-87	Decal	1
88	DUPWBT-48V-88	Handle	1
89	DUPWBT-48V-89	Hex bolt M6×16	4