


DUCAR

Engine parts manual

Model : DUEDLG4400ISE
Generator



Picture may not reflect the exact model

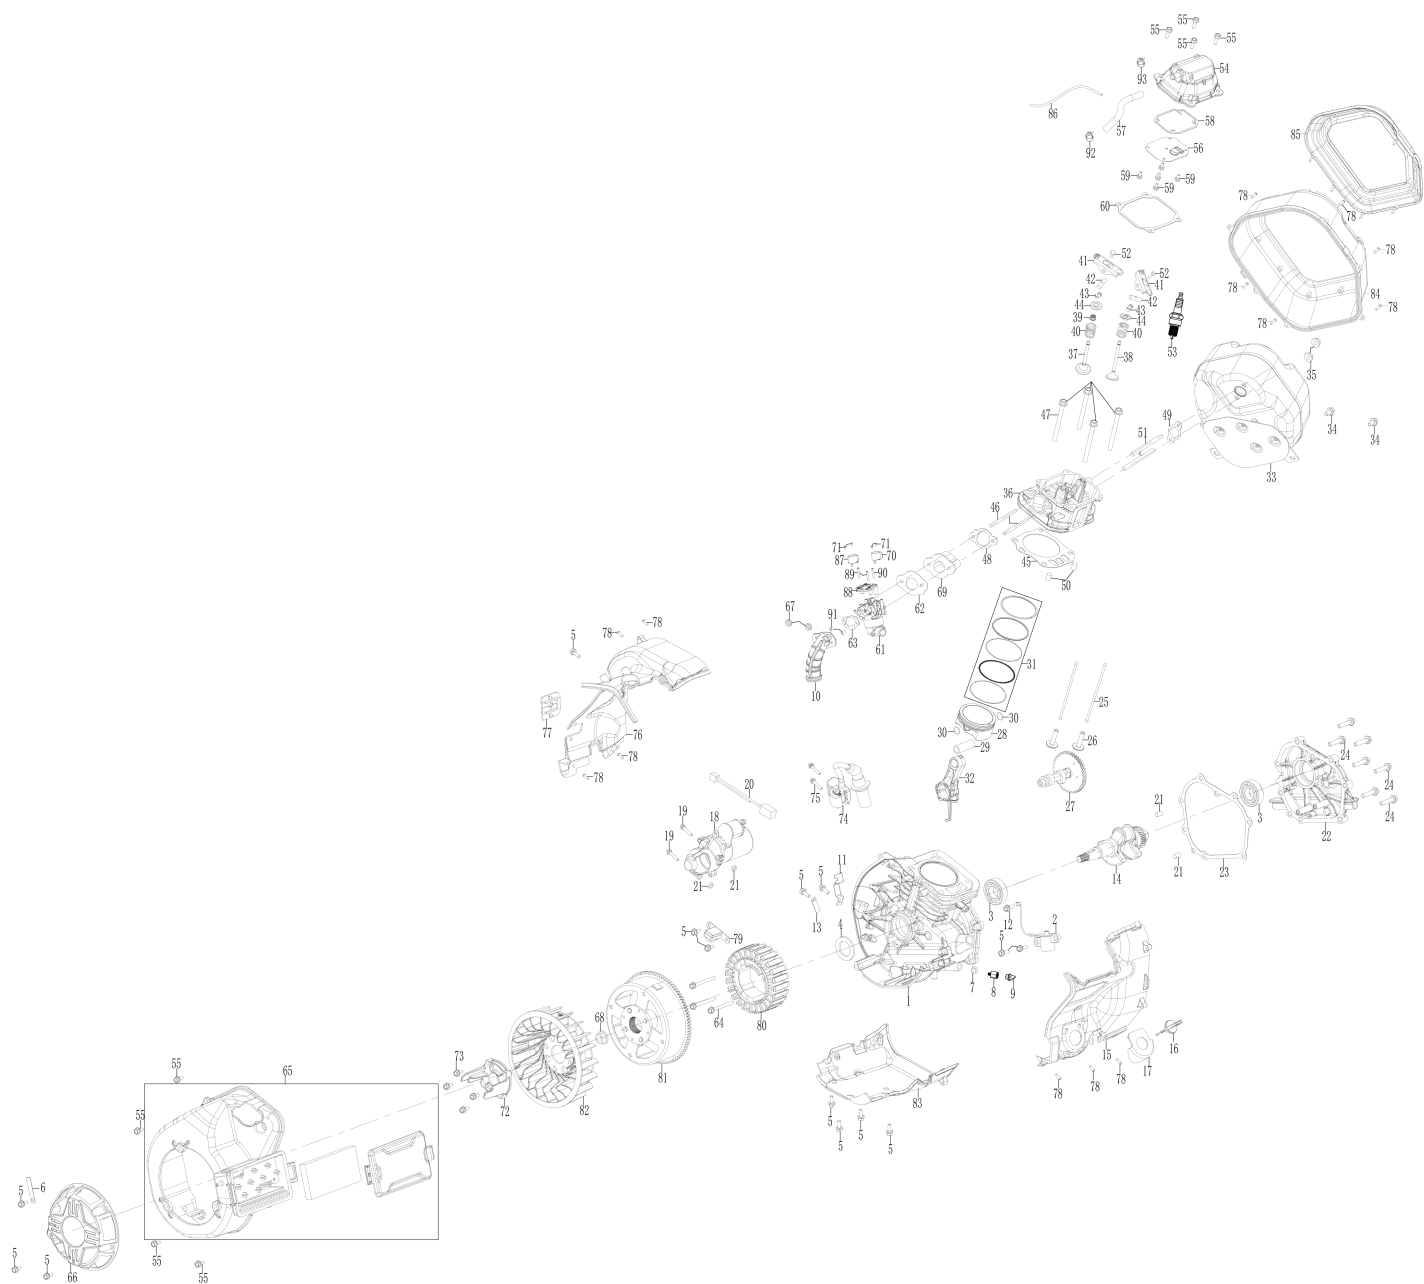

No.	Part number	Description	Qty
1	DUP343001	CRANKCASE	1
2	DUP343050	OIL SENSOR	1
3	DUP93052	BEARING	2
4	DUP93508	CRANKCASE OIL SEAL	1
5	DUP91325	BOLT M6X12	14
6	DUP599601	METAL CLIP	1
7	DUP94007	OIL DRAIN BOLT WASHER	1
8	DUP95752	DRAIN TUBE	1
9	DUP241401-138	OIL PLUG	1
10	DUP95816	INTAKE-TUBE	1
11	DUP343034	CRIMPING BLOCK	1
12	DUP91340	BOLT M6*28	1
13	DUP599616	METAL CLIP	1
14	DUP343002	CRANKSHAFT	1
15	DUP343055	LOWER WIND-LEAD-COVER	1
16	DUP245601-138	DIPSTICK ASSEMBLY	1
17	DUP343036	RUBBER SLEEVE	1
18	DUP97448	STARTING MOTOR ASSEMBLY	1
19	DUP91334	BOLT M6X30	2
20	DUP507249	BATTERY CABLE	1
21	DUP240904	CRANKCASE LOCATING PIN	4
22	DUP343011	CRANKCASE COVER	1
23	DUP96315	CRANKCASE GASKET	1
24	DUP91348	BOLT M8X35	7
25	DUP343008	PUSH ROD	2
26	DUP246103	VALVE LIFTER	2
27	DUP343009	CAMSHAFT ASSEMBLY	1
28	DUP343052	PISTON	1
29	DUP342021	PISTON PIN	1
30	DUP342020	PISTON PIN RING	2
31	DUP342022	PISTON RING ASSEMBLY	1
32	DUP343007	CONNECTING ROD ASSEMBLY	1
33	DUP343053	MUFFLER	1
34	DUP91343	BOLT M6X16	2
35	DUP90028	NUT M8	2
36	DUP343049	CYLINDER HEAD	1
37	DUP401701	INTAKE VALVE	1
38	DUP343040	EXHAUST VALVE	1
39	DUP241806	OIL SEAL	1
40	DUP343044	VALVE SPRING	2
41	DUP343016	ROCKING ARM	2

No.	Part number	Description	Qty
42	DUP343015	ROCKING ARM SHAFT	2
43	DUP400801	VALVE LOCK CLIP	4
44	DUP401801	VALVE SPRING RETAINER	2
45	DUP96316	CYLINDER HEAD GASKET	1
46	DUP91089	AIR INLET STUD BOLT	2
47	DUP91420	BOLT M8*55	4
48	DUP96319	INTAKE GASKET	1
49	DUP96335	EXHAUST GASKET	1
50	DUP320900	LOCATING PIN	2
51	DUP91139	AIR EXHAUST STUD STUD BOLT	2
52	DUP91114	BOLT M4*12	2
53	DUP97109	SPARK PLUG	1
54	DUP343019	CYLINDER HEAD COVER	1
55	DUP91330	BOLT M6*20	8
56	DUP343041	BREATHER VALVE ASSEMBLY	1
57	DUP95690	BREATHER TUBE	1
58	DUP96352	CYLINDER HEAD COVER OIL RETURN CHAMBER WASHER	1
59	DUP91322	BOLT M5X12	5
60	DUP96318	CYLINDER HEAD COVER GASKET	1
61	DUP343042	CARBURETOR ASSEMBLY	1
62	DUP96333	CARBURETOR GASKET	1
63	DUP96377	AIR FILTER GASKET	1
64	DUP91338	BOLT M6*45	3
65	DUP343059	AIR DUCT PANEL	1
66	DUP334716-052	START PULLER ASSEMBLY	1
67	DUP90016	NUT M6	2
68	DUP90003	NUT M14*1.5	1
69	DUP343027	CARBURETOR CONNECTION BLOCK	1
70	DUP343051	STEPPER MOTOR	1
71	DUP92240	BOLT M4*6	4
72	DUP343022	STARTER PULLEY	1
73	DUP91331	BOLT M6*25	4
74	DUP343047	IGNITER	1
75	DUP92091	SCREW ST5.5x25	2
76	DUP343054	UPPER WIND-LEAD-COVER	1
77	DUP343035	RUBBER SLEEVE	1
78	DUP92108	SCREW ST4.8*16	13
79	DUP339916	TRIGGER	1
80	DUP343072	STATOR	1
81	DUP343031	ROTOR	1

No.	Part number	Description	Qty
82	DUP343021	IMPELLER	1
83	DUP343056	BOTTOM WIND-LEAD-COVER	1
84	DUP343057	MUFFLER WIND DEFLECTOR	1
85	DUP343058	MUFFLER OUTER COVER SEALING RUBBER	1
86	DUP504739	TEMPERATURE SENSOR	1
87	DUP249950	STEPPER MOTOR	1
88	DUP249925	STEPPER MOTOR BRACKET	1
89	DUP92055	SCREW M4*25	2
90	DUP92219	SCREW M4*20	1
91	DUP200129	HANDLE MOUNT BUSHING	2
92	DUP94407	CLIP,FUEL LINE ϕ 10.5	1
93	DUP94436	CLIP,FUEL LINE ϕ 12 $\times$ 1.2	1