

DUCAR

Equipment parts manual

Model : DUEDLG4400ISE
Generator



Picture may not reflect the exact model

No.	Part number	Description	Qty
1	DUP500045	LOCK CLIP	29
2	DUP94418	FUEL HOSE RUBBER SLEEVE	1
3	DUP91344	BOLT M8*16	4
4	DUP92032	SCREW M4X16	1
5	DUP94217	FLAT WASHER Ø3.2	2
6	DUP503062	FUEL SWITCH	1
7	DUP500018	RECOIL HANDLE	1
8	DUP503136	PLUG	1
9	DUP506229	BATTERY SHOCK PAD	1
10	DUP94509	FIBERGLASS TUBE	1
11	DUP553161	DEPUTY WIRING HARNESS	1
12	DUP504237	CLIP	6
13	DUP506002	RIGHT TIE ROD FIXED SEAT	1
14	DUP91322	BOLT M5*12	2
15	DUP504778	ISOLATING,RIGHT	1
16	DUP506252	SHROULD, BATTERY	1
17	DUP503996-126	OBSERVATION COVER	1
18	DUP503994-126	LEFT FRAME	1
19	DUP506007	PULL ROD ASSEMBLY	1
20	DUP500009	FUEL TANK ISOLATION RUBBER PAD C	4
21	DUP599601	METAL CLIP	2
22	DUP92036	SCREW M4_L=10	3
23	DUP91398	BOLT M6X16	2
24	DUP506005-052	HANDLE DECORATIVE BOARD	1
25	DUP553166	CONTROL MODULE	1
26	DUP90035	NUT M6	8
27	DUP506250	MUFFLER BAFFLE	1
28	DUP504578	FUEL CAP	1
29	DUP50280062VN	PRESSURE REDUCING VALVE	1
30	DUP504929	INTAKE CONNECTOR	1
31	DUP92190	BOLT M5*16	12
32	DUP506091	TUBING BRACKET	1
33	DUP500661	BLIND RIVET Ø3*15MM	2
34	DUP504478	WIRE HARNESS	1
35	DUP503997	BOTTOM PLATE	1
36	DUP553204	DC VOLTAGE REGULATOR	1
37	DUP500116	SHORT WIRE	1
38	DUP503993-175A	RIGHT PANEL	1
39	DUP94508	FIBERGLASS TUBE	2
40	DUP503995-126	RIGHT FRAME	1
41	DUP506006	FUEL SWITCH KNOB	1

No.	Part number	Description	Qty
42	DUP523699	WHEEL	2
43	DUP545332	PRESSURE REDUCING VALVE	1
44	DUP111001900830VN	ENGINE DHPLG190	1
45	DUP92064	SCREW M5*16	6
46	DUP506186	PANEL REAR COVER	1
47	DUP94423	FUEL LINE CLAMP Ø9	1
48	DUP90116	NUT	1
49	DUP506092	ISOLATION SUPPORT	4
50	DUP95796	FUEL LINE	1
51	DUP503992-175A	LEFT PANEL	1
52	DUP94402	FUEL LINE CLAMP Ø8.5	2
53	DUP91332	BOLT M6X25	2
54	DUP553156	PANEL ASSEMBLY	1
54.1	DUP9067	RUNNING LIGHTS	1
54.2	DUP9066	OIL OVERLOAD INDICATOR	1
54.3	DUP9066	OIL WARNING LIGHT	1
54.4	DUP9025	ELECTRICAL OUTLET	1
54.5	DUP6691/9079	SWITCH	1
54.6	DUP9061/9080	ECO SWITCH	1
54.7	DUP9022	ONE KEY TO START THE SWITCH	1
54.8	DUP6441-20/6404	THERMAL PROTECTOR	1
54.9	DUP6441-31/6404	THERMAL PROTECTOR	1
54.10	DUP6441-30/6404	THERMAL PROTECTOR	1
54.11	DUP6015/6414	THE RV SOCKET	1
54.12	DUP6032/6970	AMERICAN STYLE DOUBLE SOCKET	1
54.13	DUP9193	PARRALLEL PORTS	2
54.14	DUP9369/9456	USB	1
54.15	DUP9132	GROUNDING BOLT	1
55	DUP94408	FUEL LINE CLAMP Ø10	2
56	DUP504252	CLIP	2
57	DUP506089	BRACKET	1
58	DUP506008	FUEL TANK	1
59	DUP503034	FUEL LINE CLAMP Ø9.5*0.8	2
60	DUP94273	FLAT WASHER	4
61	DUP94411	FUEL LINE CLAMP Ø11×0.8	1
62	DUP92044	SCREW M5*8	1
63	DUP504780	FRONT COVER	1
64	DUP91365	BOLT M6X12	1
65	DUP92229	WHEEL PIN	2
66	DUP500035	ISOLATION PAD	2
67	DUP504934	LOW PRESSURE HOSE	1

No.	Part number	Description	Qty
68	DUP506093	AXLE	1
69	DUP91327	BOLT M6X12	5
70	DUP500019-052	PULL ROPE GUIDE PLATE	1
71	DUP500017	RECOIL HANDLE COVER	1
72	DUP503077	FILTER	1
73	DUP506015	FUEL LINE	1
74	DUP506001	LEFT TIE ROD FIXED SEAT	1
75	DUP504777	ISOLATION PAD	1
76	DUP504760	BATTERY	1
77	DUP506014	FUEL LINE	1
78	DUP506012	FUEL SWITCH BRACKET	1
79	DUP506095	LOW PRESSURE HOSE	1
80	DUP553168	INVERTER MODULE	1
81	DUP504782	REAR COVER	1
82	DUP92012	SCREW M5*18	4
83	DUP599302	LOW PRESSURE HOSE HOOP	1
84	DUP504781	CABLE TRAY	1
85	DUP506003	FUEL SLOT	1
86	DUP94003	TOOTH WASHER 6	3
87	DUP92014	SCREW ST4.2X13	3
88	DUP91825	SCREW M5*12	35
89	DUP97800	GASKET	1
90	DUP96120	GASKET ϕ 6	1
91	DUP97819	GASKET ϕ 7	1
92	DUP94436	Fuel Line Clamp Ring ϕ 12 $\times$ 1.2	1
93	DUP94407	Fuel Line Clamp Ring Φ 10.5	1
94	DUP98117	Vent Pipe_Fuel Tank to Air Cleaner	1