

DUCAR

 
Engine parts manual

Model : DUESB926T
26" tracked snowblower




Picture may not reflect the exact model

CYLINDER HEAD

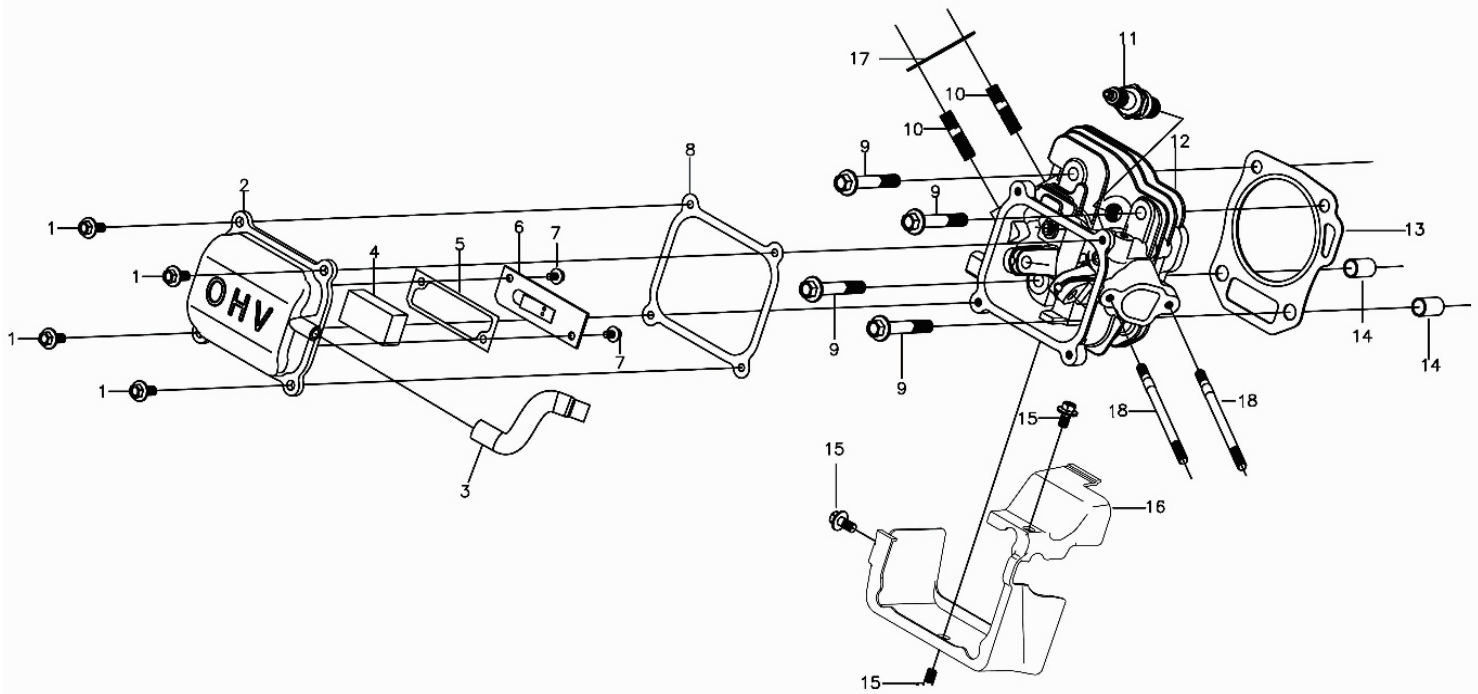


No.	Part number	Description	Qty
1	DUP380140002-0006	Hexagon bolt with flange	4
2	DUP120230138-0001	Cylinder head cover	1
3	DUP380741171-0001	Breather tube	1
4	DUP150290027-0001	Engine oil Strainer	1
5	DUP110850026-0001	PACKING, BREATHER CHAMBER	1
6	DUP110840034-0001	CAP,BREATHER CHAMBER	1
7	DUP380140429-0001	Hexagon bolt with flange	2
8	DUP120250052-0001	Gasket for cylinder head cover	1
9	DUP380140454-0002	Hexagon bolt with flange	4
10	DUP380180098-0001	Stud	2
11	DUP270960014-0001	Spark plug	1
12	DUP120080636-0001	Cylinder head	1
13	DUP120150216-0001	Gasket for cylinder head	1
14	DUP380600116-0001	ocation pin	2
15	DUP380140089-0003	Hexagon bolt with flange	3
16	DUP160190084-0001	air deflector	1
17	DUP180650116-0001	Outlet gasket	1
18	DUP380180093-0001	Stud	2

 CRANKCASE BODY

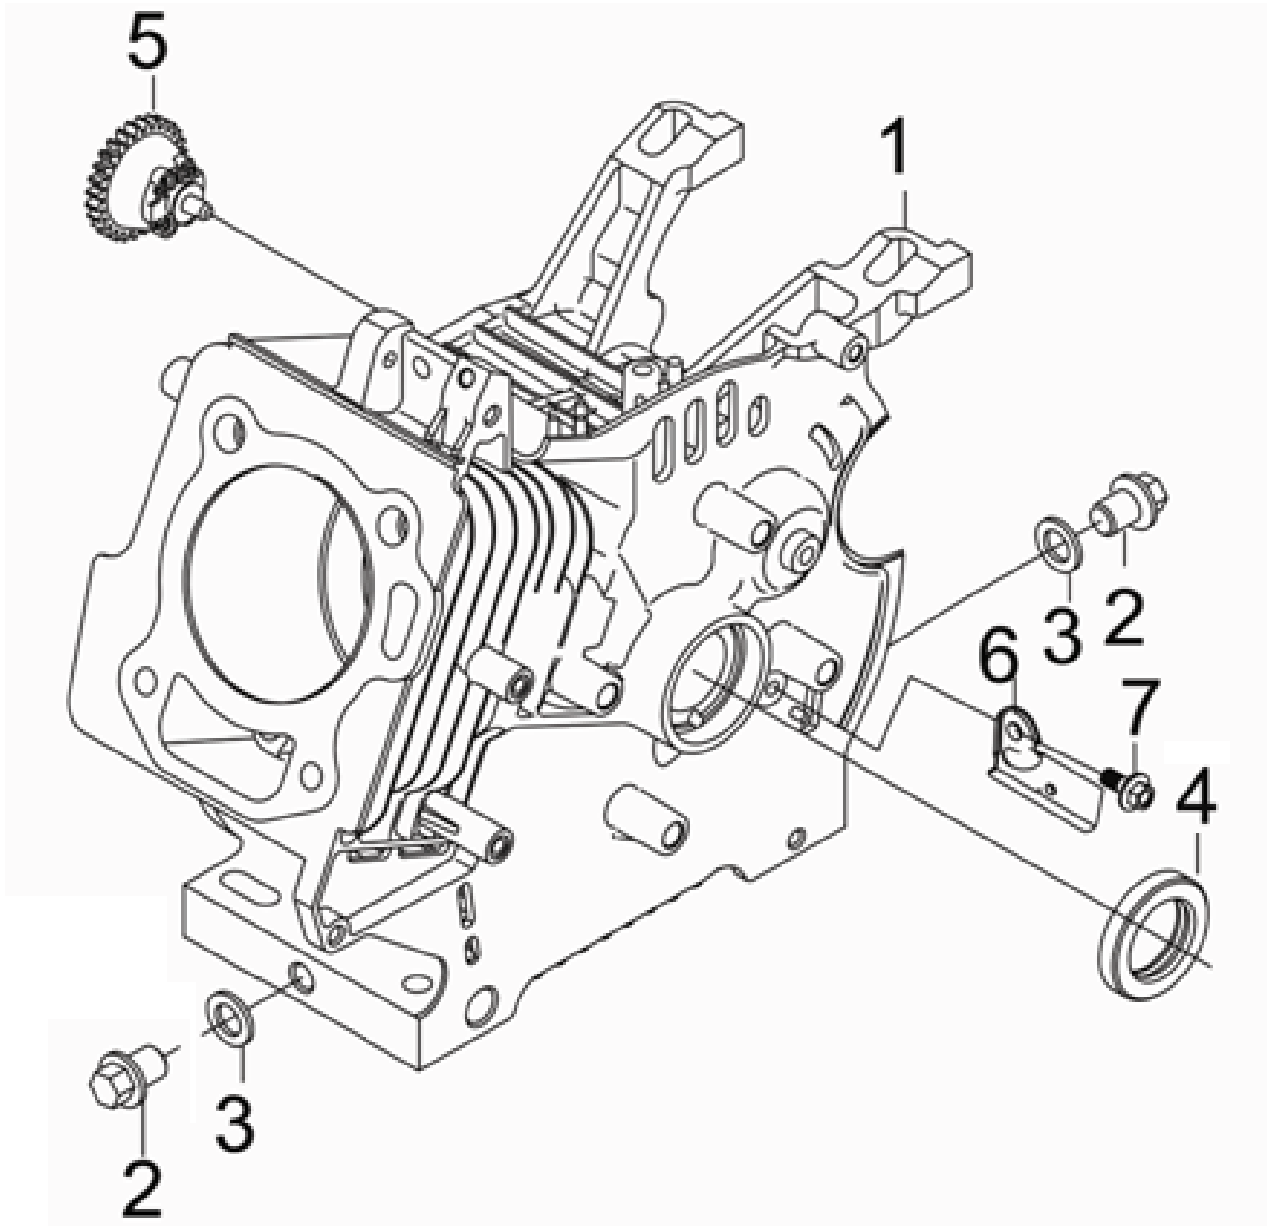


No.	Part number	Description	Qty
1	DUP110810304-0001	Crankcase body	1
2	DUP110260025-0001	Sealing plug screw	2
3	DUP380450514-0001	Flat washer	3
4	DUP380650490-0002	Oil seal	1
5	DUP171750032-0002	Components of governor gear	1
6	DUP270280025-0001	Tension disc for wire bundle	1
7	DUP380140089-0003	Hexagon bolt with flange	1

 CRANKCASE COVER

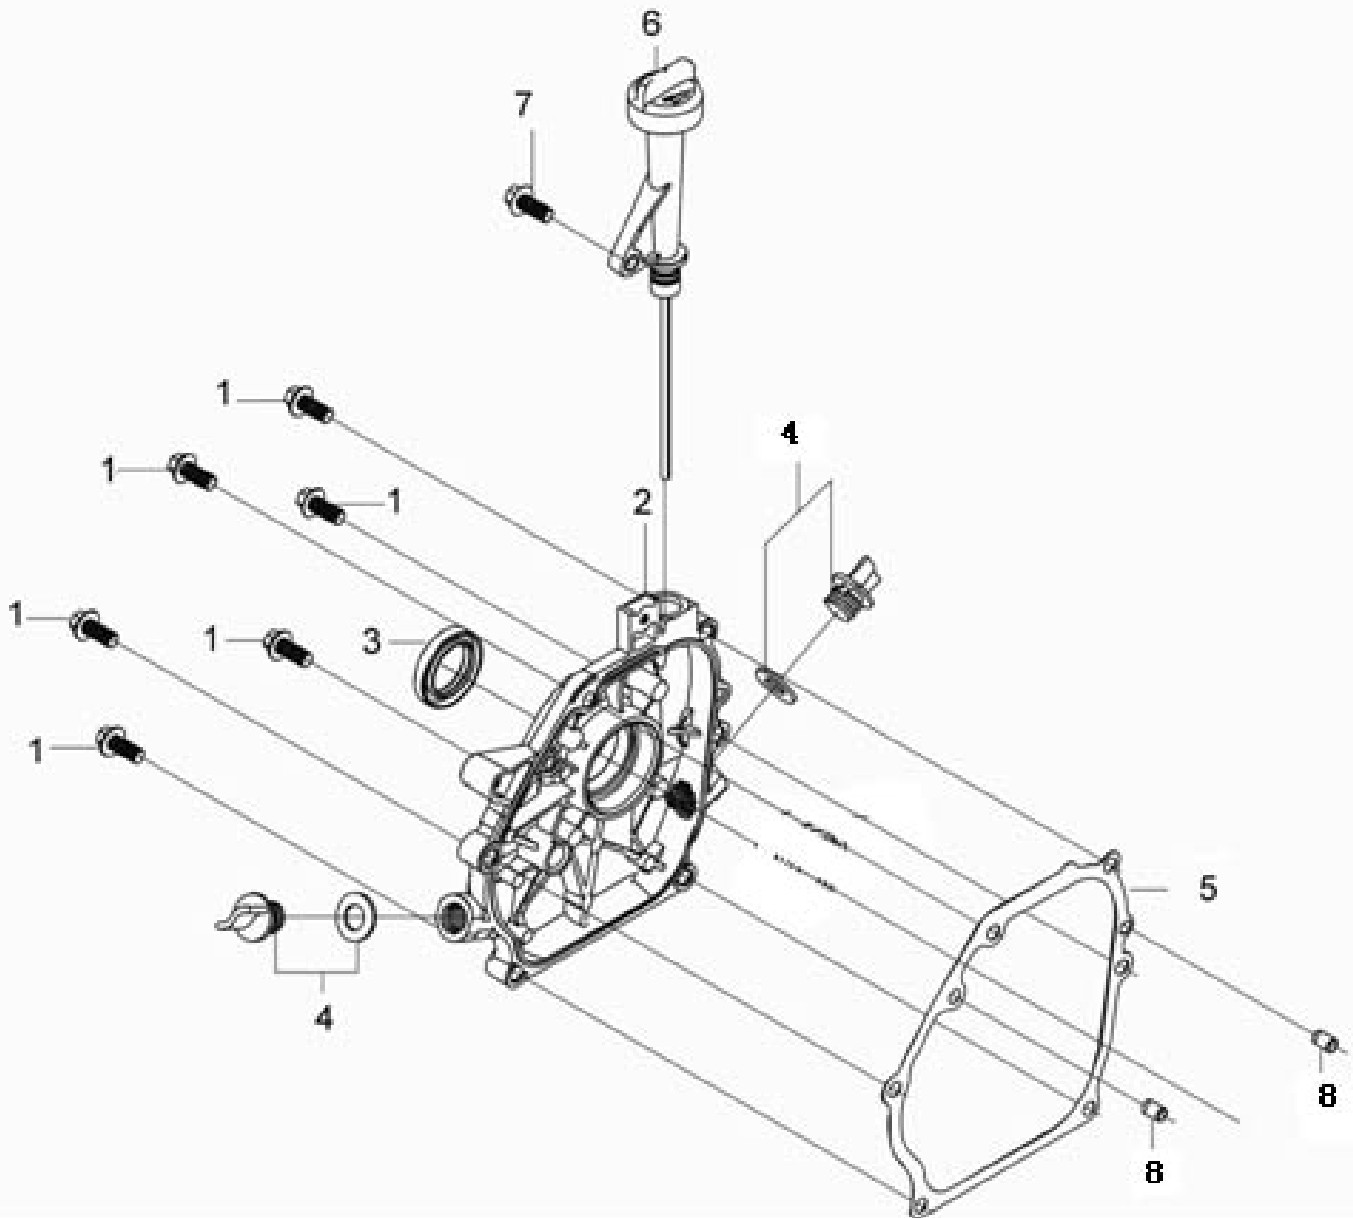


No.	Part number	Description	Qty
1	DUP380140028-0004	Hexagon bolt with flange	6
2	DUP110820192-0001	Crankcase cover	1
3	DUP380650645-0001	Oil seal	1
4	DUP110690038-0001	Oil rule combination	2
5	DUP110830063-0001	Crankcase cover gasket	1
6	DUP110690081-0001	Oil rule combination	1
7	DUP380140003-0007	Hexagon bolt with flange	1
8	DUP380600120-0001	Positioning pin	2

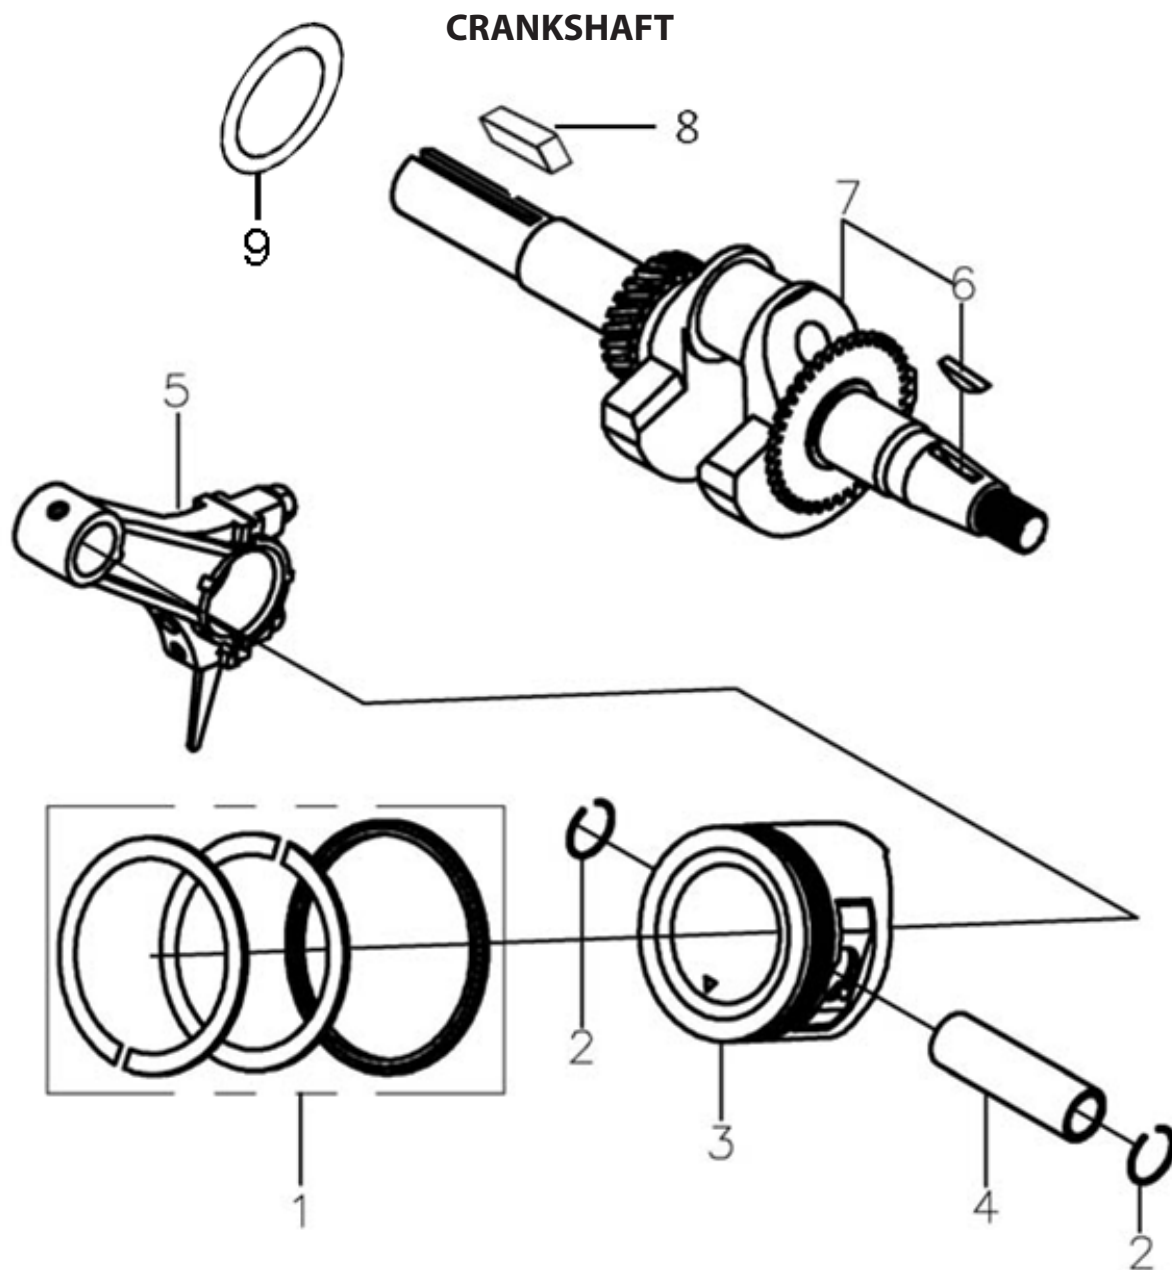 


No.	Part number	Description	Qty
1	DUP130070158-0001	Piston ring combination	1
2	DUP380560056-0001	Steel cable baffle ring	2
3	DUP130030245-0001	Piston	1
4	DUP130060031-0001	Piston pin	1
5	DUP130150039-0001	Connecting rod	1
6	DUP380620050-0001	Key	1
7	DUP130290527-0001	crankshaft	1
8	DUP380620040-0001	Key	1
9	DUP380451091-0001	Flat washer	1

 CAMSHAFT

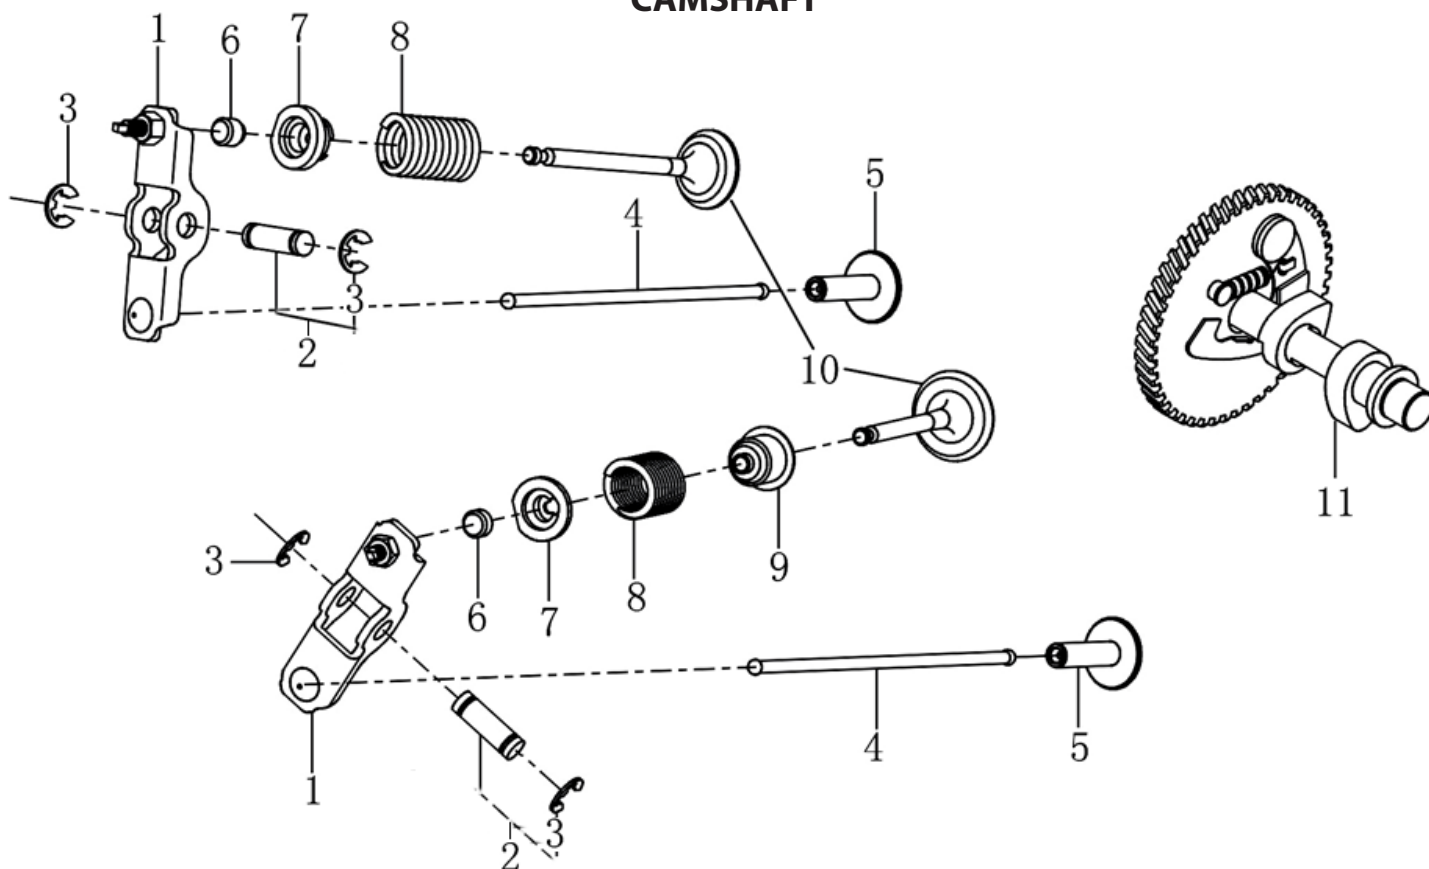


No.	Part number	Description	Qty
1	DUP140450068-0001	Valve rocker combination	2
2	DUP141730001-0001	Valve rocker shaft	2
3	DUP380570024-0003	Split damping ring	4
4	DUP140670047-0001	Push rod	2
5	DUP140690003-0001	Lifter, Valve	2
6	DUP140320001-0001	Valve adjustment cap	2
7	DUP140380017-0001	Retainer, valve spring	2
8	DUP140340039-0001	Inner spring of valve	2
9	DUP140400016-0001	Valve oil seal	1
10	DUP500550076-0001	Valve Kit	1
11	DUP140020187-0001	Camshaft assy	1

 STARTER ASSEMBLY

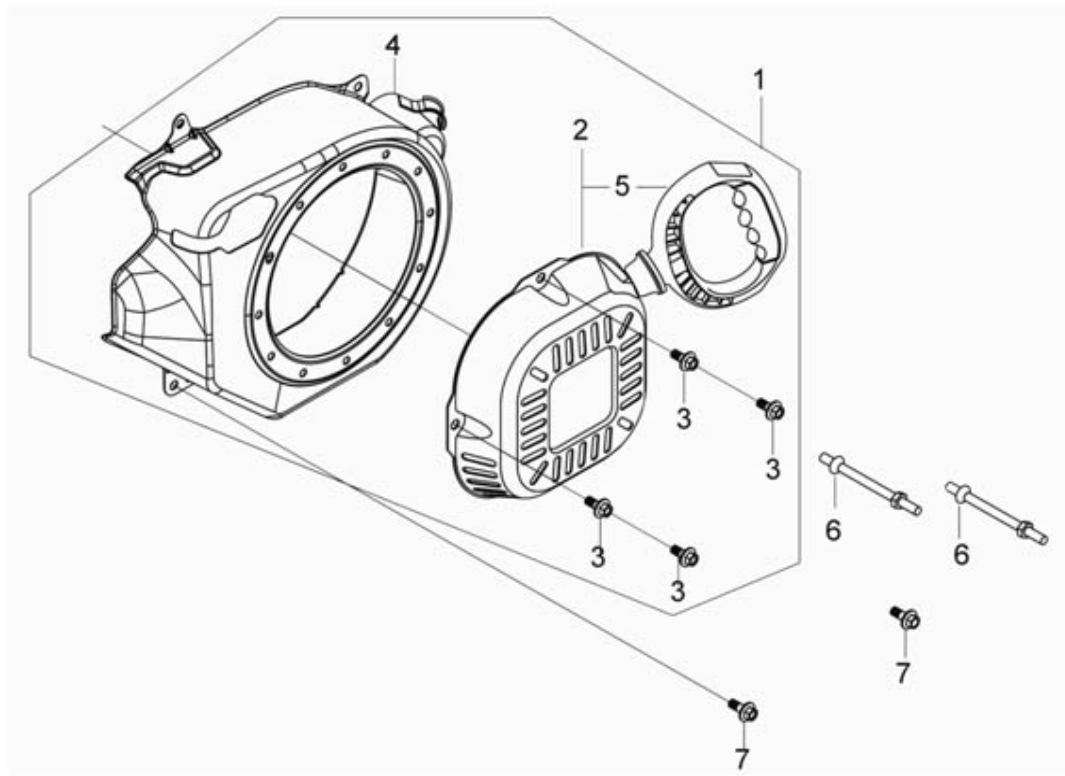


No.	Part number	Description	Qty
1	DUP193490399-0001	Manual starting assembly	1
2	DUP193500119-TB02	Manual starting components	1
3	DUP380140531-0001	Hexagon bolt with flange	4
4	DUP160210119-0001	Fan cover comp.	1
5	DUP193560012-0002	Pull rope handle	1
6	DUP380850019-0001	Stay stud	2
7	DUP380140001-0005	Hexagon bolt with flange	4
8	DUP380930107-0001	Location wire nail	1

 CARBURETOR

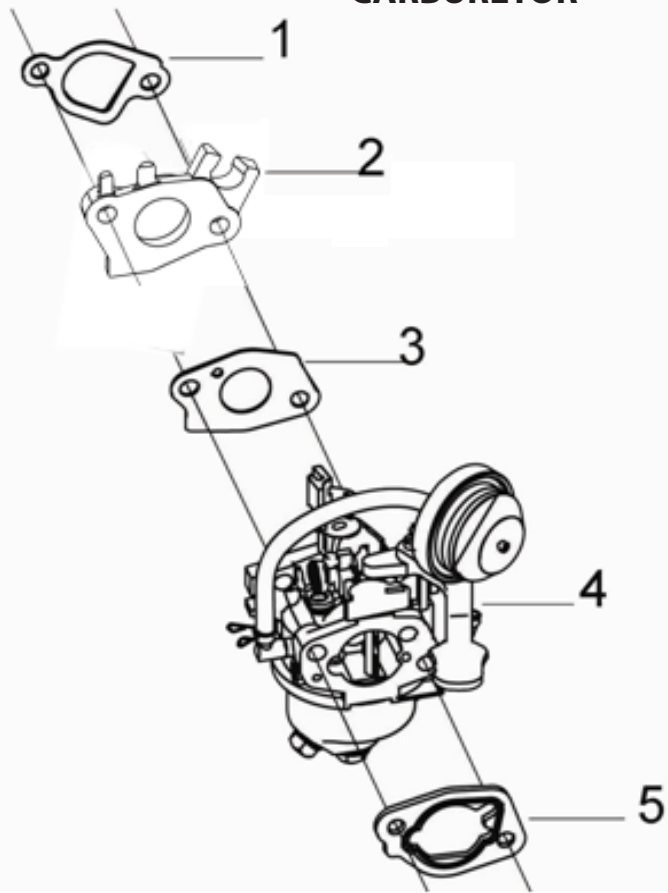


No.	Part number	Description	Qty
1	DUP170430178-0001	Carburetor gasket	1
2	DUP170440093-0001	Heat insulating pad for carburetor	1
3	DUP170430179-0001	Carburetor gasket	1
4	DUP170021687-0001	Carburetor	1
5	DUP170430065-0001	Carburetor gasket	1

 FLYWHEEL/COIL ASSEMBLY

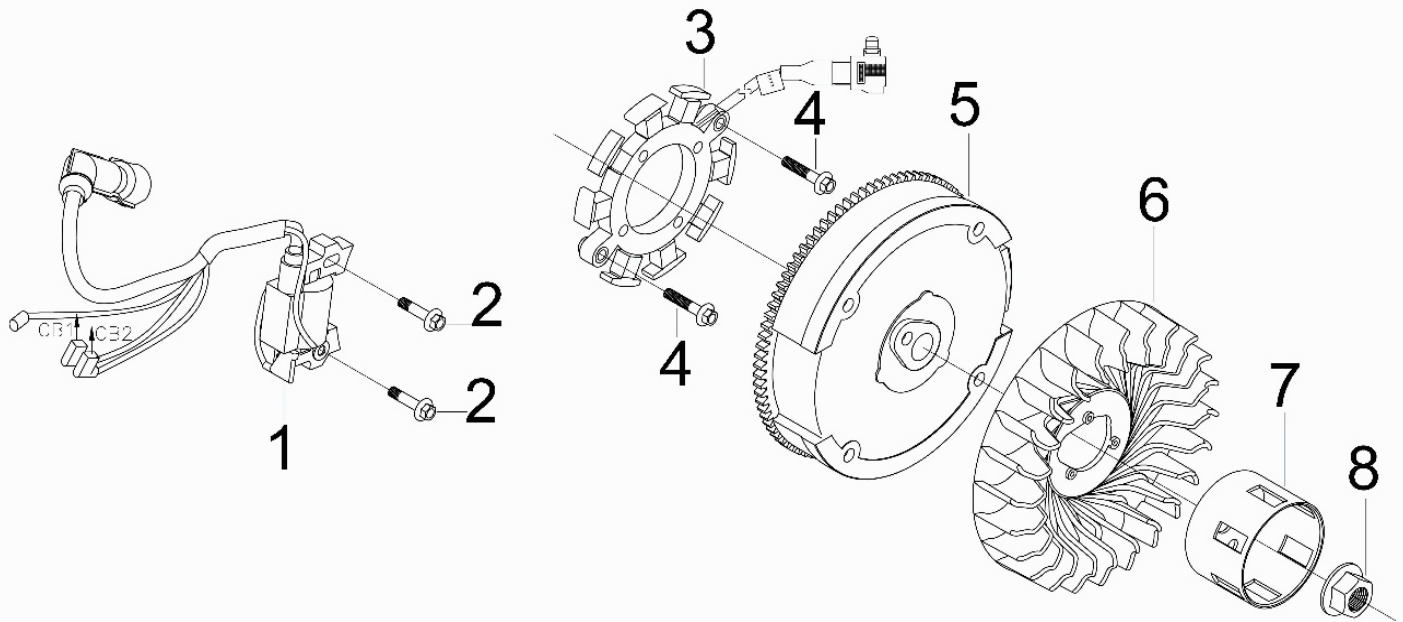


No.	Part number	Description	Qty
1	DUP270920265-0001	COIL ASSY.,IGNNTION	1
2	DUP380140102-0004	Hexagon bolt with flange	2
3	DUP270210040-0002	Lighting coil combination	1
4	DUP380140095-0005	Hexagon bolt with flange	2
5	DUP270020278-0001	FLYWHEEL COMP	1
6	DUP160180036-0001	Impeller	1
7	DUP193590034-0001	Starting disc	1
8	DUP380370051-0001	Hexagon nut with flange	1

 CONTROL SYSTEM

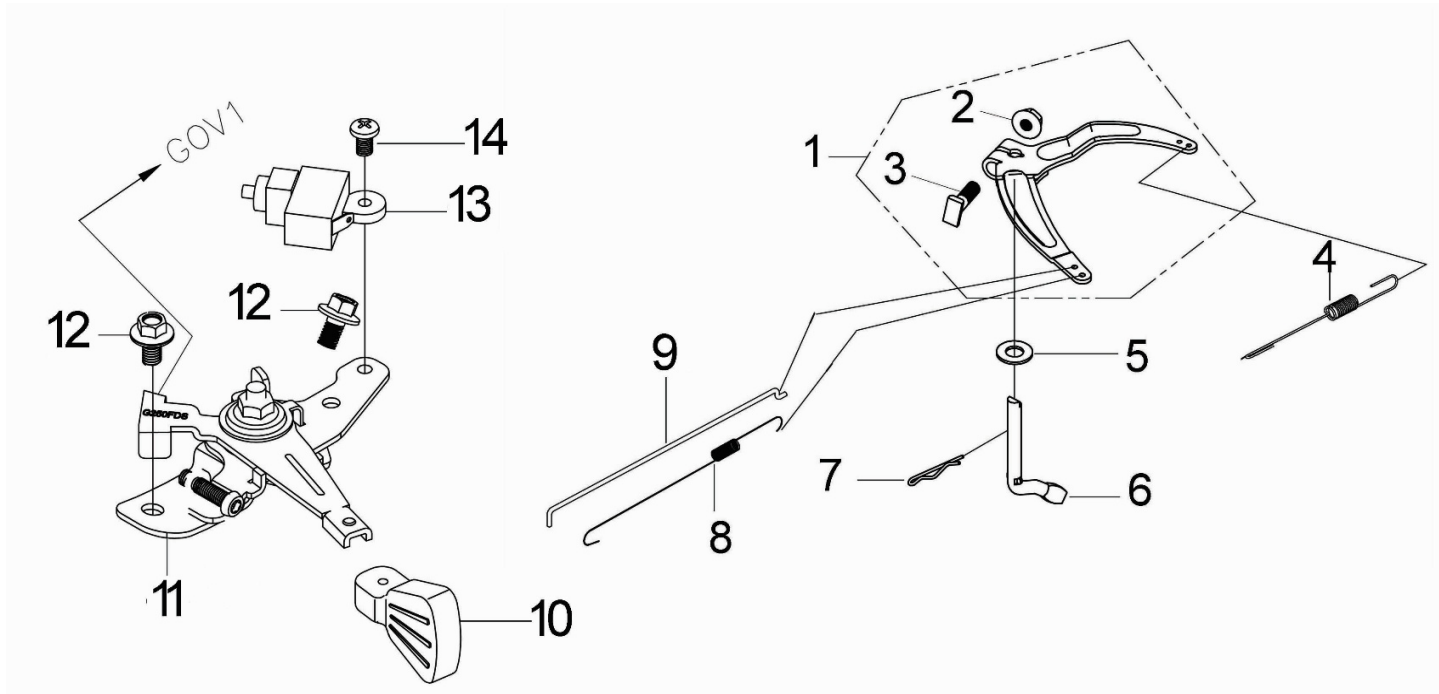


No.	Part number	Description	Qty
1	DUP171620044-0001	Speed regulating bracket	1
2	DUP380370066-0001	Hexagon nut with flange	1
3	DUP380250002-0001	Square head set screw with flat point	1
4	DUP171600096-0001	Governing spring	1
5	DUP380450531-0001	Flat washer	1
6	DUP171630025-0001	Speed regulating arm	1
7	DUP381350004-0001	Pin clip	1
8	DUP171610029-0001	throttle return spring	1
9	DUP171590030-0001	Throttle rod	1
10	DUP173710004-0001	Throttle handle Rubber sleeve	1
11	DUP171680125-0001	Throttle handle combination	1
12	DUP380140089-0003	Hexagon bolt with flange	2
13	DUP271660026-0001	Stop switch	1
14	DUP380200008-0005	Cross recessed pan head screw	1

 AIR FILTER

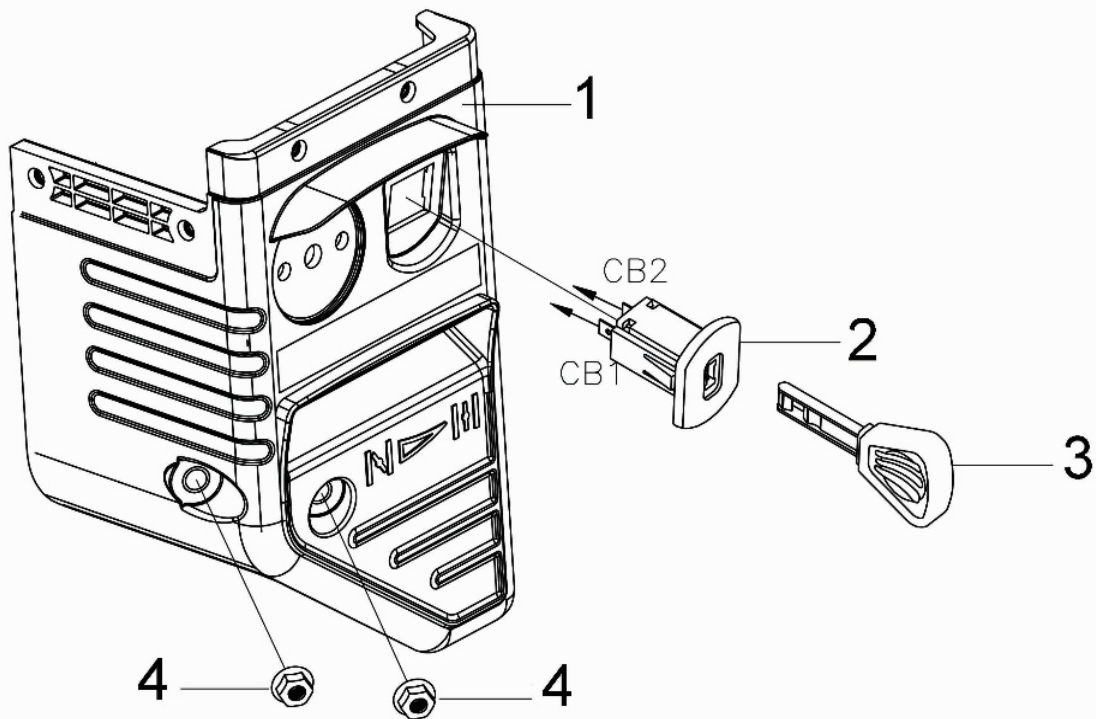


No.	Part number	Description	Qty
1	DUP180020680-0001	Air filter	1
2	DUP271660054-0001	Stop switch	1
3	DUP273210001-0003	Switch off key	2
4	DUP380370048-0003	Hexagon nut with flange	2

 MUFFLER

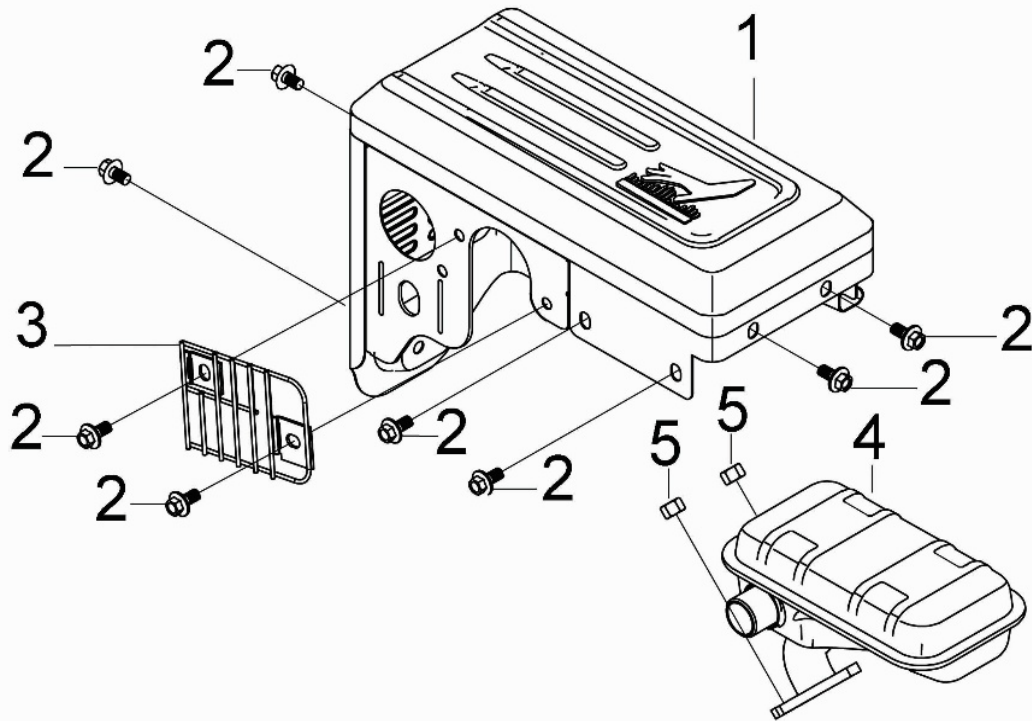


No.	Part number	Description	Qty
1	DUP180960174-0001	Muffler guard shield	1
2	DUP380140001-0005	Hexagon bolt with flange	8
3	DUP180940039-0001	Muffler Anti-scald frame	1
4	DUP180571903-0001	Muffler	1
5	DUP380340005-0005	Hexagon nut	2

 FUEL TANK

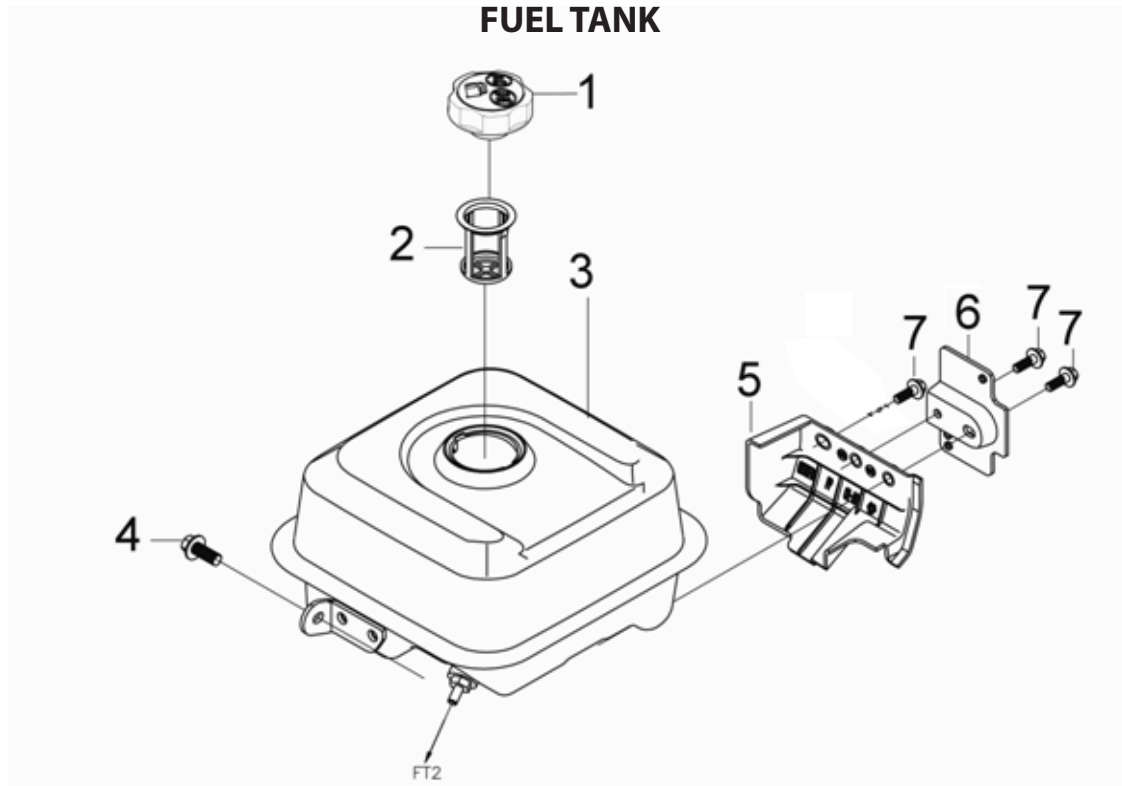


No.	Part number	Description	Qty
1	DUP170870056-0001	Tank cover	1
2	DUP170720009-0001	Pouring orifice filter screen combination	1
3	DUP170501123-0003	Tank	1
4	DUP380140001-0005	Hexagon bolt with flange	1
5	DUP661280021-0001	Power Decorative plates	1
6	DUP270860051-0001	Mounting bracket for electric device	1
7	DUP380140003-0007	Hexagon bolt with flange	3

 POWER DECORATIVE PLATES

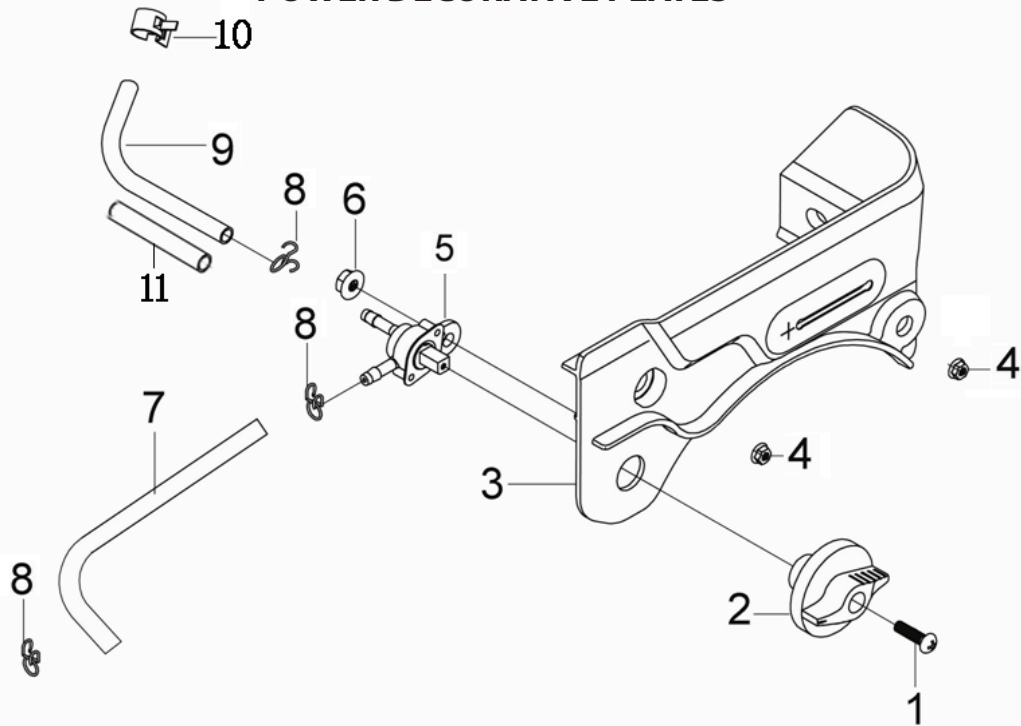

No.	Part number	Description	Qty
1	DUP380200071-0002	Cross recessed pan head screw	1
2	DUP173260001-0002	Oil switch knob	1
3	DUP661280020-0001	Power Decorative plates	1
4	DUP380370048-0003	Hexagon nut with flange	2
5	DUP170980081-0001	Components of oil switch	1
6	DUP380370048-0001	Hexagon nut with flange	1
7	DUP380750767-0001	Oil tube	1
8	DUP380950188-0001	Pipe clip	3
9	DUP380750803-0001	Oil tube	1
10	DUP380960121-0005	Clip combination	1
11	DUP380770209-0001	Protective sleeve	1

 STARTING MOTOR

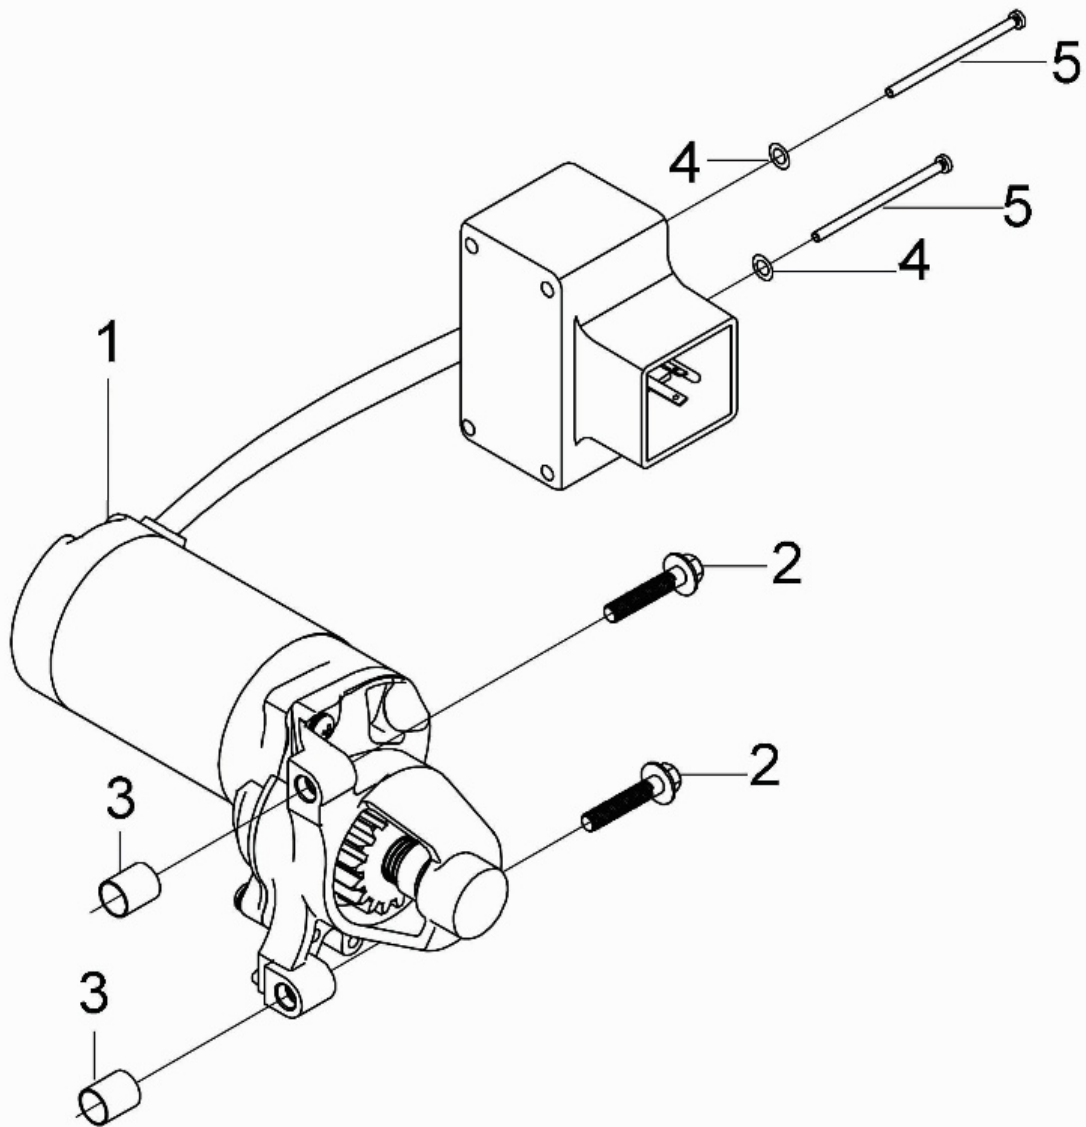

No.	Part number	Description	Qty
1	DUP270360133-0001	Components of starting motor	1
2	DUP380140122-0004	Hexagon bolt with flange	2
3	DUP380600121-0001	ocation pin	2
4	DUP380450578-0001	Flat washer	2
5	DUP380200003-0004	Cross recessed pan head screw	2