



# DUCAR

## Equipment parts manual

### Model : DUELS14T Gas log splitter

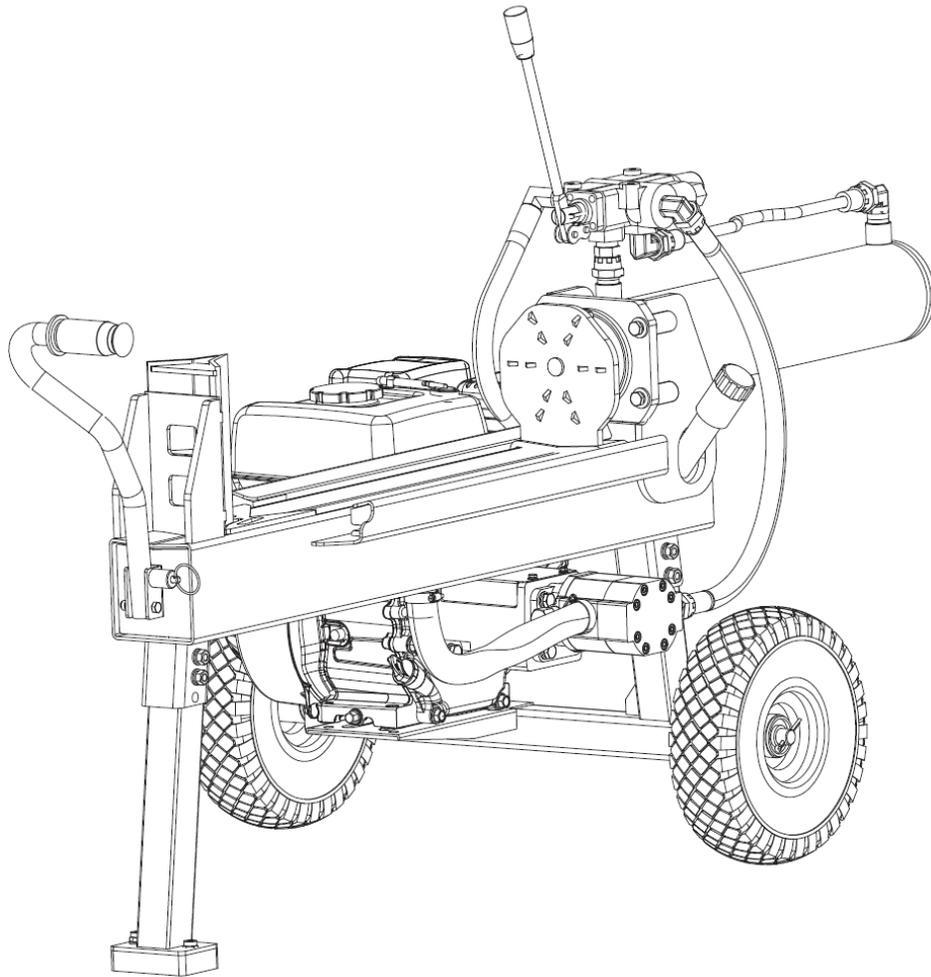

Picture may not reflect the exact model

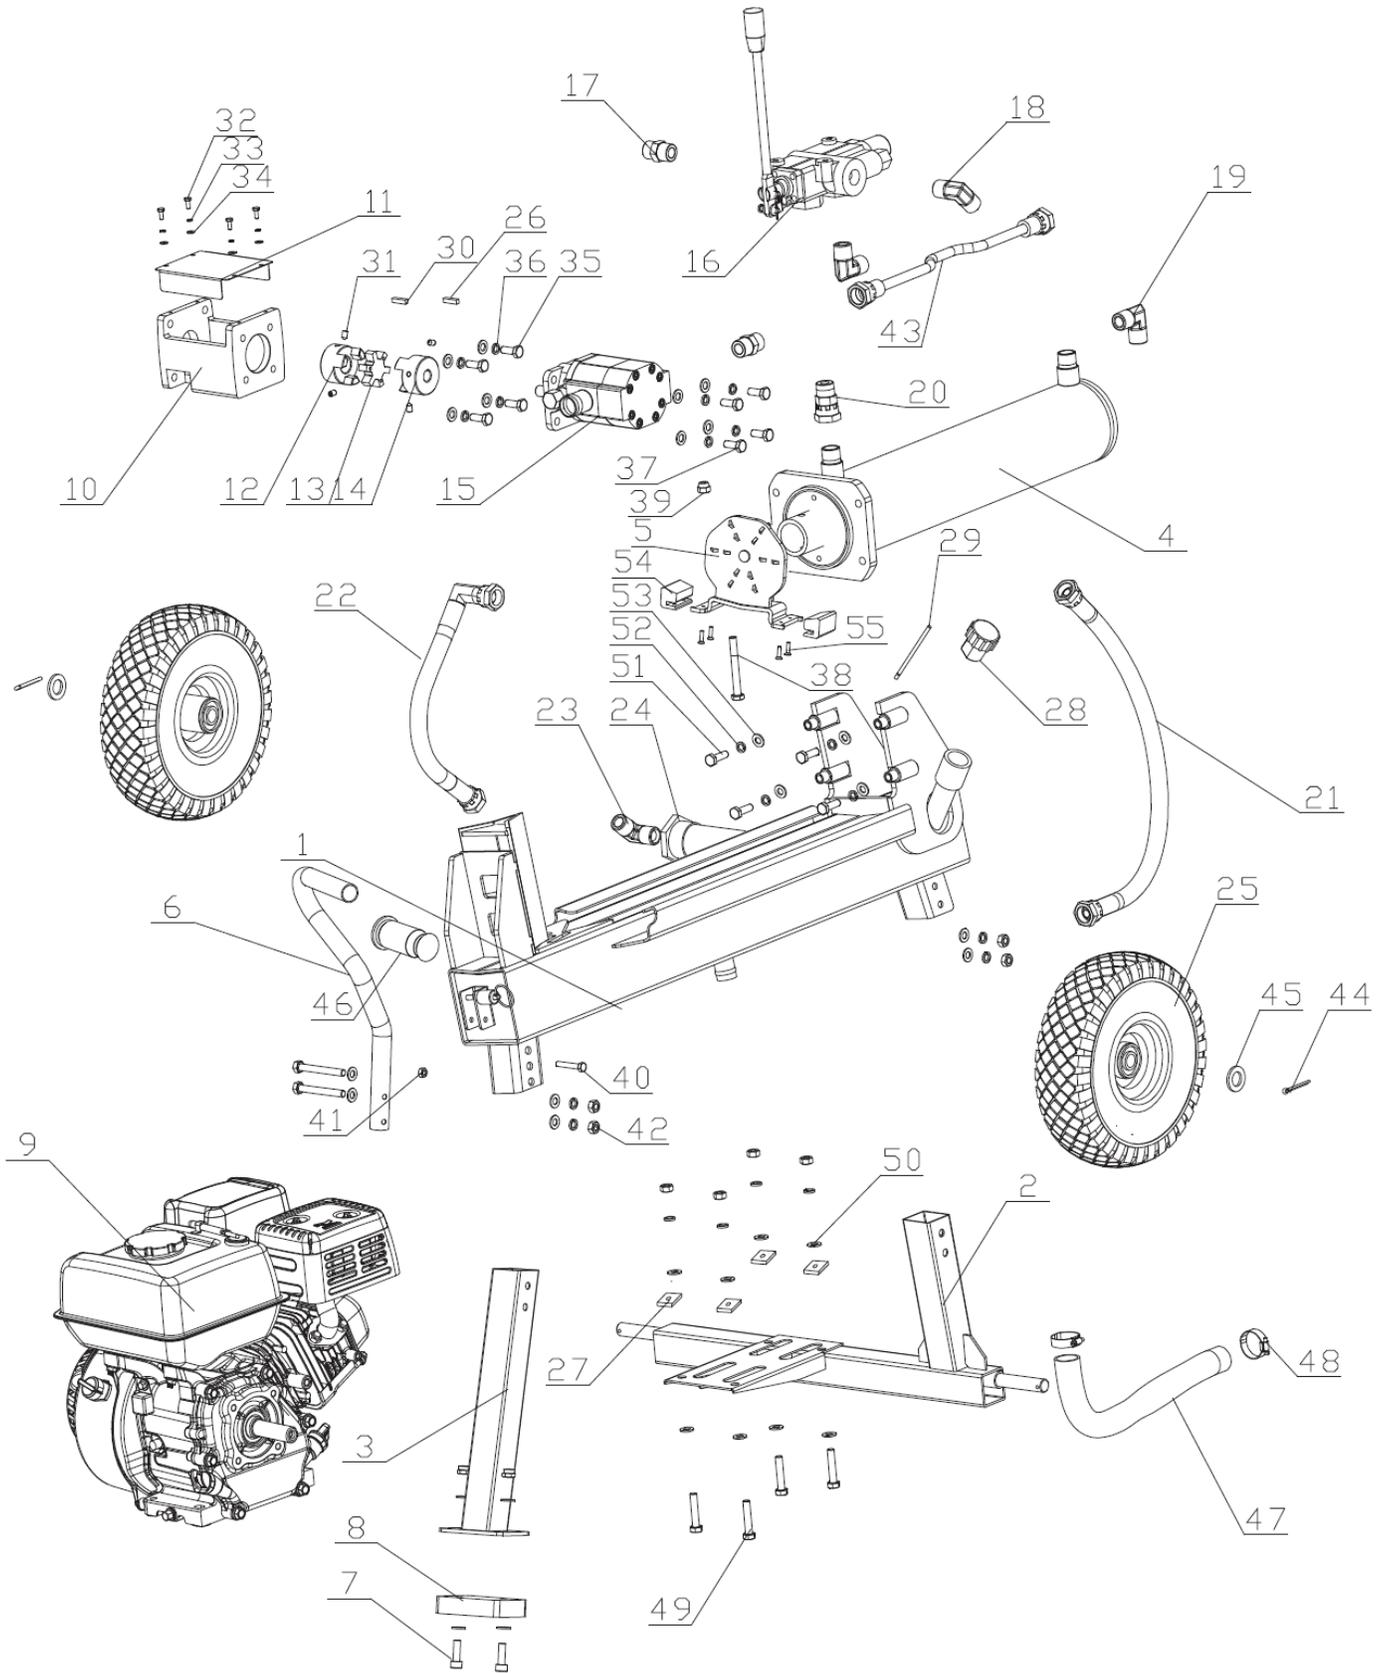

<b>No.</b>	<b>Code</b>	<b>Description</b>	<b>Qty</b>
1	DUPLS14T001	Beam	1
2	DUPLS14T002	Underframe	1
3	DUPLS14T003	Support leg	1
4	DUPLS14T004	Cylinder ass.	1
5	DUPLS14T005	Log push plate	1
6	DUPLS14T006	Moving handle	1
7	DUPLS14T007	Allen bolt M8x20	2
8	DUPLS14T008	Rubber damping pad	1
9	DUPLS14T009	Ducar engine 212cc	1
10	DUPLS14T010	Pump bracket	1
11	DUPLS14T011	Pump bracket cover	1
12	DUPLS14T012	Gear pump connector right	1
13	DUPLS14T013	Coupling rubber ring	1
14	DUPLS14T014	Gear pump connector left	1
15	DUPLS14T015	Pump	1
16	DUPLS14T016	Control valve	1
17	DUPLS14T017	Outlet fitting	2
18	DUPLS14T018	Right-angle fitting 1	1
19	DUPLS14T019	Right-angle fitting 2	2
20	DUPLS14T020	Straight connector	1
21	DUPLS14T021	High pressure oil inlet hose	1
22	DUPLS14T022	Oil return hose	1
23	DUPLS14T023	Right-angle fitting 3	1
24	DUPLS14T024	Return oil filter	1
25	DUPLS14T025	Wheel	2
26	DUPLS14T026	Key 3x25	1
27	DUPLS14T027	Support cushion	4
28	DUPLS14T028	Tank cap	1
29	DUPLS14T029	Dipstick	1
30	DUPLS14T030	Key 3/16x30	1
31	DUPLS14T031	Allen bolt M6x8	2
32	DUPLS14T032	Screw M4x8	4
33	DUPLS14T033	Lock washer 4	4
34	DUPLS14T034	Flat washer 4	4
35	DUPLS14T035	Bolt 5/16-24UNF	4
36	DUPLS14T036	Lock washer 8	18
37	DUPLS14T037	Bolt M8x20	4
38	DUPLS14T038	Bolt M6x65	5
39	DUPLS14T039	Lock nut M8	3
40	DUPLS14T040	Bolt M6x40	1
41	DUPLS14T041	Lock nut M6	1

42	DUPLS14T042	Nut M8	8
43	DUPLS14T043	Hydraulic hose valve-cylinder	1
44	DUPLS14T044	Cotter pin 3x30	2
45	DUPLS14T045	Flat washer 16	2
46	DUPLS14T046	Handle sleeve	1
47	DUPLS14T047	Suction hose	1
48	DUPLS14T048	Clamp	2
49	DUPLS14T049	Bolt M8x45	4
50	DUPLS14T050	Flat washer 8	28
51	DUPLS14T051	Bolt M10x35	4
52	DUPLS14T052	Lock washer 10	4
53	DUPLS14T053	Flat washer 10	4
54	DUPLS14T054	Guide block	2
55	DUPLS14T055	Bolt M5x20	4