

DUCAR

Equipment parts manual

Model : DUED7500iR
7500W inverter generator



Picture may not reflect the exact model



No.	Code	Description	Qty
1	DUP111003000916	ENGINE ASSY DH300B	1
2	DUP506801-126	RIGHT FRAME	1
3	DUP99519	BEARING CLIP	8
4	DUP500018	RECOIL HANDLE	1
5	DUP500017	RECOIL HANDLE COVER	1
6	DUP503026	ISOLATION PAD	2
7	DUP92032	SCREW M4*16	1
8	DUP94217	FLAT WASHER	2
9	DUP91336	BOLT M6×35	4
10	DUP507208	PROTECTIVE COVER	4
11	DUP94091	FLAT WASHER	2
12	DUP92078	SCREW M6X16	41
13	DUP91825	SCREW M5*12	6
14	DUP92014	SCREW ST4.2*13	3
15	DUP506828	SHORT WIRE	1
16	DUP506682	SEALING RING	1
17	DUP91306	BOLT M6*25	2
18	DUP506814	FUEL TANK	1
19	DUP503782	FUEL NOZZLE	1
20	DUP503033	PULL ROD SEAT	1
21	DUP553097	SHORT WIRE	1
22	DUP553034	DEPUTY WIRING HARNESS	1
23	DUP500019-052	PULL ROPE GUIDE PLATE	1
24	DUP506254	BATTERY WIRING ASSEMBLY	1
25	DUP506819	BATTERY HOLDER	1
26	DUP503028	FUEL CAP	1
27	DUP503671	FUEL TANK FILTER	1
28	DUP91327	BOLT M6*12	20
29	DUP506662	LIFTER	1
30	DUP506663	LIFTER	1
31	DUP506809	LIFTER	1
32	DUP90019	NUT M8	16
33	DUP506810	LIFTER	1
34	DUP506666	THE BEAM	1
35	DUP506813	THE BEAM	1
36	DUP503077	FILTER	1
37	DUP90026	NUT M8	2
38	DUP97710	FUEL LINE	1
39	DUP97742	FUEL LINE	1
40	DUP506805	PANEL REAR COVER	1
41	DUP506806	BOTTOM PLATE	1

42	DUP553036-126	KNOB	1
43	DUP92012	SCREW M5*18	4
44	DUP506675	THE BEAM	1
45	DUP506817	BAFFLE	1
46	DUP506999-175A	LEFT PANEL	1
47	DUP506727	CONTROL MODULE ASSEMBLY	1
48	DUP553129	INVERTER MODULE	1
49	DUP506683	BRACKET	1
50	DUP506815-052	DECORATIVE BOARD	1
51	DUP506803-175A	RIGHT PANEL	1
52	DUP506804-126	TOP COVER	1
53	DUP511007	BATTERY	1
54	DUP94418	RUBBER SLEEVE	1
55	DUP506808	PLUG	5
56	DUP506658	WHEEL COVER	2
57	DUP506659	WHEEL	2
58	DUP553250	PANEL ASSEMBLY	1
58.1	DUP6387	BATTERY CHARGING PORT 2.5MM	1
58.2	DUP6502/6408	SWITCH	1
58.3	DUP9032	ECO SWITCH	1
58.4	DUP9369/9456	USB	1
58.5	DUP6257	CHARGING MODULE	1
58.6	DUP536003	ONE PUSH BOTTON SWITCH	1
58.7	DUP9021	VOLTAGE RESET SWITCH	1
58.8	DUP6032/6676	L5-20R RECEPTACLE	1
58.9	DUP6441-20/6404	THERMAL PROTECTOR	1
58.10	DUP6441-30/6404	THERMAL PROTECTOR	1
58.11	DUP9358	MULTIFUNCTION TABLE	1
58.12	DUP6015/6679	TT-30R RECEPTACIE	1
58.13	DUP6525-30/6404	BIPOLAR CIRCUIT BREAKER	1
58.14	DUP6434-25/6406	BREAKER	1
58.15	DUP9193	PARALLEL SOCKET	1
58.16	DUP6241/6678	L14-30R RECEPTACLE	1
58.17	DUP9132	GROUNDING BOLT	1
59	DUP506818	FUEL SLOT	1
60	DUP504781	CABLE TRAY	1
61	DUP506673	ISOLATION SUPPORT	4
62	DUP94408	FUEL LINE CLAMP	3
63	DUP504780	FRONT COVER	1
64	DUP503035	PULL ROD ASSEMBLY	1
65	DUP504237	CLIP	10
66	DUP506800-126	LEFT FRAME	1

67	DUP504782	REAR COVER	1
68	DUP506674-506	HANDLE	2
69	DUP503062	FUEL SWITCH	1
70	DUP500060	LOCK CLIP	37
71	DUP500661	BLIND RIVET	2
72	DUP503034	FUEL HOSE CLIP	2
73	DUP94166	AXIS CHECKING RING	2
74	DUP553038	BRACKET	1
75	DUP91460	BOLT M6*25	4
76	DUP599099-126	COVER	1
77	DUP92036	SCREW M4_L=10	3
78	DUP504072	FILTER	1
79	DUP504071	RUBBER SLEEVE	1
80	DUP245406-126	ONE WAY VALVE ASSEMBLY	1
81	DUP95168	BREATHER HOSE	1
82	DUP94402	FUEL HOSE CLIP	2
83	DUP94552	FIBERGLASS PIPE	1