


DUCAR

Engine parts manual

Model : DUEDLG7500IR
7500W Inverter generator



Picture may not reflect the exact model

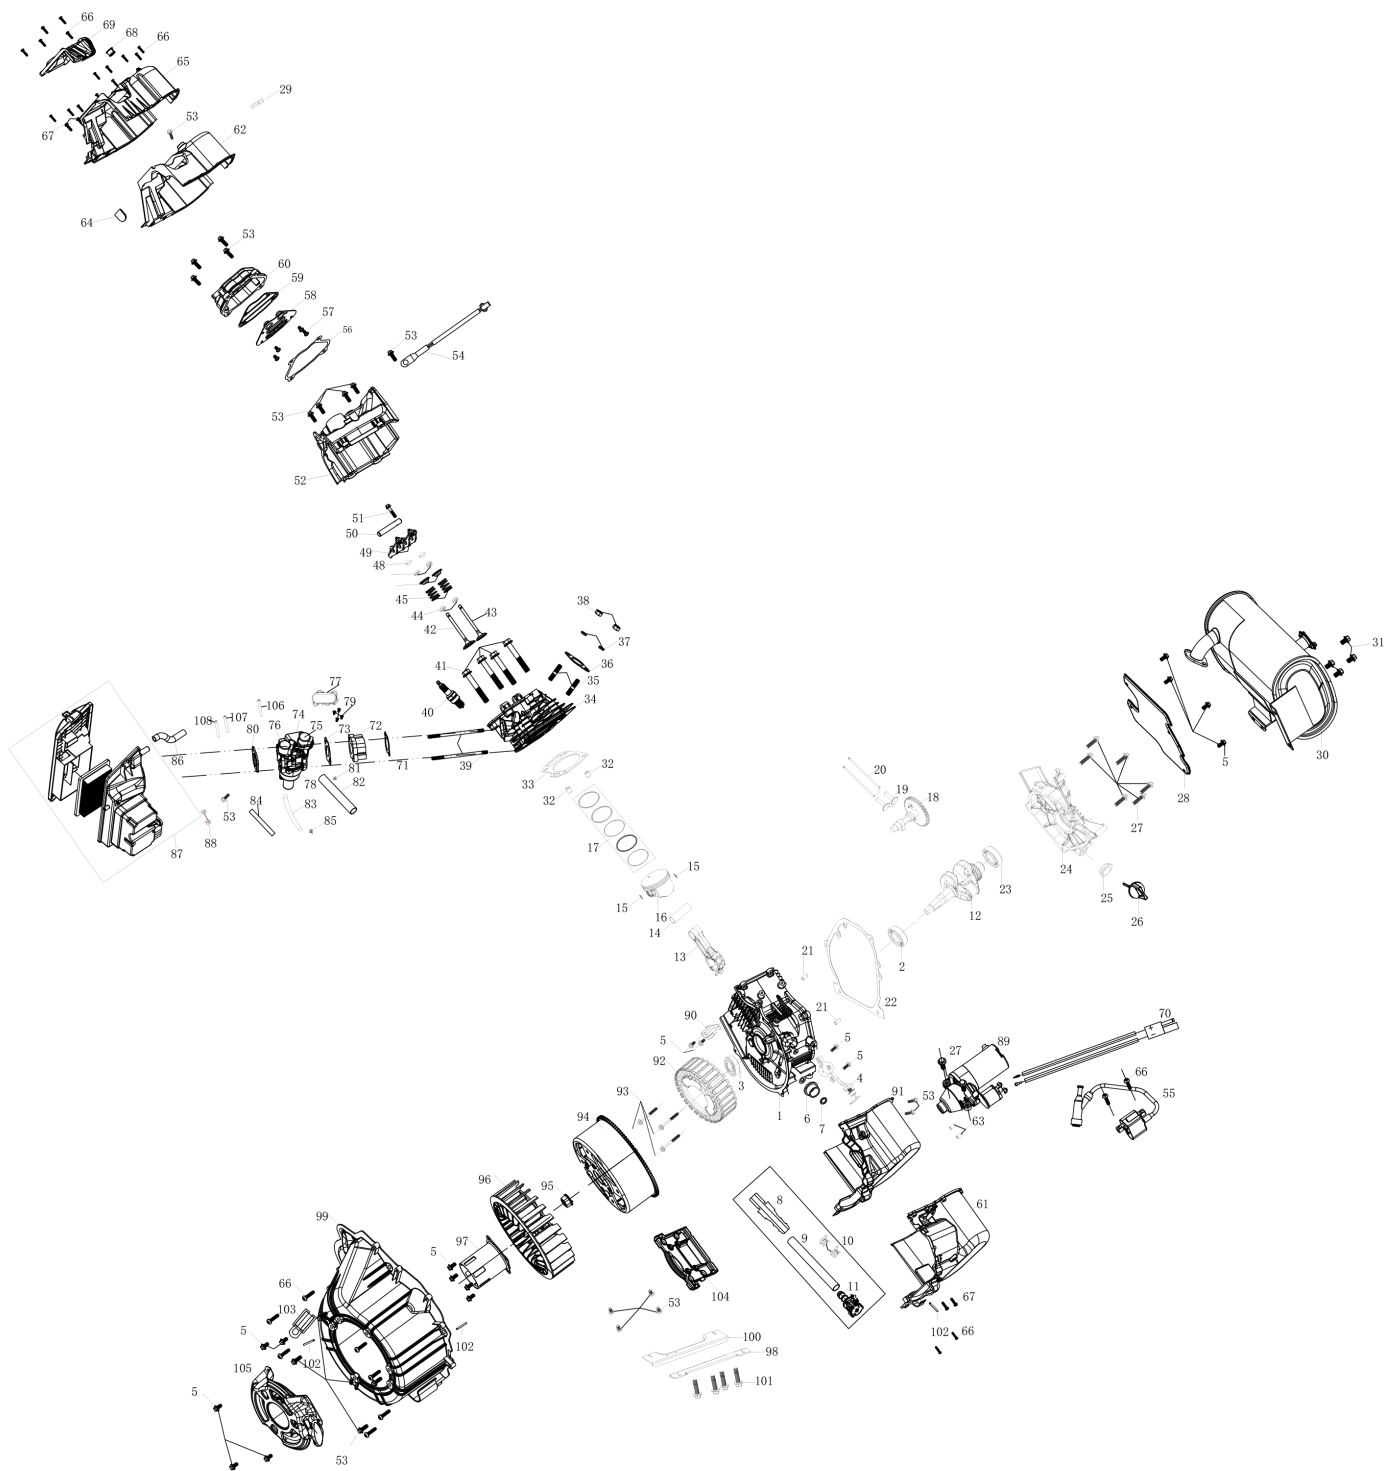

No.	Part number	Description	Qty
1	DUP400088	CRANKCASE	1
2	DUP93030	BEARING	1
3	DUP93512	OIL SEAL	1
4	DUP245106	OIL SENSOR	1
5	DUP91325	BOLT M6*12	17
6	DUP550618	SEALING RING	1
7	DUP94007	FLAT WASHER	1
8	DUP409905	SEALING SCREW	1
9	DUP449913	OIL OUTLET PIPE	1
10	DUP449916	CLAMP	2
11	DUP449917	OIL DRAIN ASSEMBLY	1
12	DUP400150	CRANKSHAFT	1
16	DUP491201	PISTON	1
13	DUP400047	CONNECTING ROB	1
14	DUP400055	PISTON PIN	1
15	DUP241301	PISTON PIN RING	2
17	DUP491601	PISTON RING ASSEMBLY	1
18	DUP400063	CAMSHAFT ASSEMBLY	1
19	DUP406101	VALVE LIFTER	2
21	DUP240901	CRANKCASE LOCATING PIN	2
20	DUP400052	PUSH ROD	2
22	DUP97804	GASKET	1
23	DUP93056	BEARING	1
24	DUP400089	CRANKCASE COVER	1
25	DUP94528	RUBBER SLEEVE	1
26	DUP330084-295	DIPSTICK ASSEMBLY	1
27	DUP91347	BOLT M8*30	8
28	DUP535805	INSULATION BOARD	1
29	DUP94544	RUBBER SLEEVE	1
30	DUP705731	MUFFLER	1
31	DUP91342	BOLT M8*12	4
32	DUP400901	CYLINDER HEAD LOCATING PIN	2
33	DUP91006	BOLT	2
34	DUP96279	GASKET	1
35	DUP400160	CYLINDER HEAD	1
36	DUP91007	BOLT M8*38	2
37	DUP94206	SPRING WASHER	2
38	DUP550609	GASKET	1
39	DUP90011	NUT M8	2
40	DUP97132	SPARK PLUG	1
41	DUP91452	BOLT M10*1.25	4
42	DUP400158	INTAKE VALVE	1
43	DUP400159	EXHAUST VALVE	1
44	DUP241806	OIL SEAL	2
45	DUP406001	VALVE SPRING	2

No.	Part number	Description	Qty
46	DUP401801	VALVE SPRING RETAINER	2
47	DUP400801	VALVE LOCK CLIP	4
48	DUP241804	TOP CAP	2
49	DUP400045	ROCKING ARM	2
50	DUP400053	ROCKING ARM SHAFT	1
51	DUP91395	BOLT M5*25	1
52	DUP400091	AIR DUCT PANEL	1
53	DUP91329	BOLT M6X16	21
54	DUP504739	TEMPERATURE SENSOR	1
55	DUP400229	IGNITION COIL	1
56	DUP96390	GASKET	1
57	DUP92052	SCREW	4
58	DUP400054	CYLINDER HEAD INTERNAL COVER	1
59	DUP96381	GASKET	1
60	DUP400046	CYLINDER HEAD COVER	1
61	DUP400260	AIR DUCT PANEL	1
62	DUP400092	AIR DUCT PANEL	1
64	DUP506824	PLUG	1
63	DUP240910	LOCATING PIN	2
65	DUP400093	AIR DUCT PANEL	1
66	DUP92447	SCREW ST4.8x25	27
67	DUP91334	BOLT M6X30	4
68	DUP506823	PLUG	1
69	DUP400230	SEALING COVER	1
70	DUP400151	BATTERY CABLE	1
71	DUP96235	GASKET	1
72	DUP400524	CARBURETOR CONNECTION BLOCK	1
73	DUP96224	GASKET	1
74	DUP249925	STEPPER MOTOR BRACKET	1
75	DUP507153	STEPPER MOTOR	1
76	DUP503579	STEPPER MOTOR	1
77	DUP249934	WATERPROOF COVER	1
78	DUP400265	CARBURETOR ASSEMBLY	1
79	DUP91180	BOLT	4
80	DUP94324	STEEL WASHER	1
81	DUP599302	HOOP	1
82	DUP95839	LOW PRESSURE HOSE	1
83	DUP97705	FUEL LINE	1
84	DUP94492	FIBERGLASS TUBE	1
85	DUP94408	FUEL LINE CLAMP	1
86	DUP95696	EXHAUST PIPE	1
87	DUP400108	AIR FILTER ASSEMBLY	1
88	DUP90016	NUT M6	2
89	DUP97492	STARTING MOTOR ASSEMBLY	1
90	DUP339902	TRIGGER	1

No.	Part number	Description	Qty
91	DUP400095	AIR DUCT PANEL	1
92	DUP400307	STATOR	1
93	DUP91400	BOLT M6X60	3
94	DUP506714	ROTOR	1
95	DUP90003	NUT	1
96	DUP404602	IMPELLER	1
97	DUP404501	STARTER PULLEY	1
98	DUP506669	AIR DUCT CONNECTING PLATE	1
99	DUP400090	RECOIL STARTER ASSEMBLY	1
100	DUP506670	LEFT THE CONNECTION PLATE	1
101	DUP91343	BOLT M8X16	4
102	DUP599601	METAL CLIP	3
103	DUP94447	FUEL LINE CLAMP	1
104	DUP400097	AIR DUCT PANEL	1
105	DUP330091-052	START PULLER ASSEMBLY	1
106	DUP92219	SCREW M4*20	1
107	DUP92055	SCREW M4*25	1
108	DUP92400	SCREW M3*18	1