

DUCAR

Diagramme de pièces *Parts diagram*



Le modèle peut différer légèrement de la photo / *The model may differ slightly from the picture*

DG15000E

Moteur *Engine*

DG15000E



Spare parts for the DG15000E gasoline engine			
NO.	Code		Qty
1	90043	NUT M6	4
2	319901	HARNESS,FUEL CUT SOLENOID	1
3	91371	BOLT M6X35	2
4	324700	RECOIL STARTER ASSEMBLY	1
5	95464	FUEL TUBE	1
6	329909	OIL FILTER BASE	1
7	91833	CONNECTING PIPE,OIL FILTER	1
8	91385	BOLT M8X16	8
9	90041	NUT M20	1
10	94030	FLAT WASHER	1
11	329913	PLATE,FAN FIXED	1
12	324600	FAN	1
13	320400	FLYWHEEL ASSEMBLY	1
14	91383	BOLT M6X30	9
15	97212	CHARGE COIL	1
16	91043	BOLT M6X113	4
17	91377	BOLT M6X95	4
18	97540	IGNITION COIL ASSY	1
19	93530	OIL SEAL	2
20	91365	BOLT M6X12	29
21	320503	WIND SHIELD,LH	1
22	320504	WIND SHIELD,RH	1
23	97539	IGNITION COIL ASSY	1
24	94222	FLAT WASHER	2
25	91374	BOLT M6X22	1
26	95461	FUEL TUBE,PUMP IN	1
27	95462	FUEL TUBE,PUMP OUT	1
28	94410	CLIP,FUEL LINE	8
29	516401	FILTER,FUEL	1
30	95463	FUEL TUBE,PUMP NEGATIVE PRESSURE	1
31	94418	RUBBER	3
32	369904	BRACKET,FUEL PUMP	1
33	329914	FUEL PUMP	1
34	320601	DIAPHRAGM,BREATHER	1
35	320600	COVER,BREATHER	1
36	96133	GASKET	1
37	91378	BOLT M8X110	2
38	95907	INTAKE PIPE	1
39	97414	STARTING MOTOR ASSEMBLY	1
40	96139	GASKET	2
41	91832	BOLT, DRAIN PLUG M14X1.5X12	2
42	94419	CLIP,FUEL LINE	2
43	91331	BOLT M6X25	2
44	95618	TUBE,BREATHER	1
45	320200	CRANKCASE	1
46	240904	PIN, DOWEL Φ 8X12	3
47	329902	SUPPORTING SEAT ASSY,ROCKER	1

48	91330	BOLT M6X20	4
49	94033	WASHER	1
50	96134	GASKET	1
51	241301	CLIP, PISTON	4
52	325500	PIN, PISTON	2
53	321500	ROD ASSEMBLY., CONNECTING	2
54	321200	PISTON	2
55	320300	CRANKSHAFT ASSEMBLY	1
56	329919	LOCKINMG	1
57	324202	SPRING,CHOKE	1
58	324201	SPRING,THROTTLE	1
59	329918	SPEED GOVENOR ASSY	1
60	251603	SCRAPER RING SET ,PISTON	2
61	324101	SPRING,GOVERNOR	1
62	94031	FLAT WASHER	1
63	91042	BOLT M8X39	4
64	93023	BALL BEARING	1
65	322000	CAMSHAFT ASSEMBLY	1
66	94032	FLAT WASHER	1
67	96140	GASKET	2
68	91370	BOLT M6X16	5
69	325100	SWITCH ASSEMBLY,OIL LEVEL	1
70	323700	MUFFLER COMP	1
71	329907	STRAINER COVER	1
72	92047	PHILIPS SCREW M6X16	2
73	329903	OIL PUMP ASSY	1
74	324300	GOVERNOR ASSEMBLY	1
75	94242	FLAT WASHER	2
76	90025	LOCK NUT M8	4
77	325600	DIPSTICK	1
78	315101	AMPLIFIER	1
79	329904	SPRING,PRESSURE RELEASE	1
80	329905	STEEL BALL	1
81	320900	PIN, DOWEL	2
82	320100	COVER CRANKCASE	1
83	94034	WASHER	2
84	329908	OIL FILTER	1
85	91834	CONNECTING PIPE,OIL FILTER BASE	2
86	91379	BOLT M8X50	9
87	329906	STRAINER,OIL	1
88	260901	PIN, DOWEL	4
89	261702	VALVE,IN	2
90	260802	LOCKINMG FLAPS	8
91	96135	GASKET	2
92	94241	FLAT WASHER $\Phi 10.2 \times \Phi 17 \times 1$	2
93	320502	SHROUD	2
94	321000	CYLINDER HEAD, L	1
95	97112	SPARK PULG	2
96	321900	ROD,PUSH	4

97	262202	PLATE,PUSH ROD GUIDE	2
98	261807	RETURNER,INTAKE VALVE	2
99	93513	OIL SEAL,VALVE	2
100	326000	SPRING,VALVE	4
101	261805	SEAT, VALVE SPRING	4
102	261806	ROTATOR	4
103	322100	ROCKER ASSY	4
104	91380	BOLT M10X80	8
105	95465	OIL TUBE	1
106	94421	CLIP,FUEL TUBE	4
107	329911	BRACKET,HEAT RADIATOR	1
108	91308	BOLT M6X28	4
109	329912	HEAT RADIATOR	1
110	320500	SHROUD, L	1
111	96136	GASKET	2
112	321100	COVER COMP, CYLINDER HEAD, L	1
113	329901	LUG	2
114	329922	BRACKET,TUBE	1
115	321400	OIL PLUG	1
116	93024	BALL BEARING	2
117	93515	SEAL,GOVERNOR ARM SHAFT	1
118	323900	SHAFT,GOVERNOR ARM	1
119	213902		1
120	90016	NUT M6	1
121	91822	BOLT M6X21	1
122	324000	GOVERNOR ARM	1
123	95905	CONNECTING PIPE	1
124	323000	PLATE	1
125	322900	AIR CLEANER ASSEMBLY	1
126	95466	OIL TUBE	1
127	265903	VALVE EXHAUST	2
128	92048	PHILIPS SCREW M8X50	4
129	96141	SPACER, CARBURETOR	2
130	321001	CYLINDER HEAD, R	1
131	320501	SHROUD, R	1
132	321101	COVER COMP, CYLINDER HEAD, R	1
133	599601	CLIP,WIRE HARNESS	1
134	325200		1
135	91376	BOLT M6X65	1
136	96138	GASKET,AIR FILTER PIPE	1
137	329916	ROD,CONNECTING CHOKE	1
138	95906	PIPE,CARBURETOR	1
139	324200	SPRING,THROTTL RETURN	1
140	322700	ROD,GOVERNOR	1
141	329920	LOCKINMG	1
142	322800	CARBURETOR ASSEMBLY	1
143	96137	GASKET, CARBURETOR	4
144	329900	CLAMPER CORD A	1