

DUCAR

Diagramme de pièces *Parts diagram*




Le modèle peut différer légèrement de la photo / The model may differ slightly from the picture

DLG4000iSE dual fuel

Moteur *Engine*

DLG4000iSE

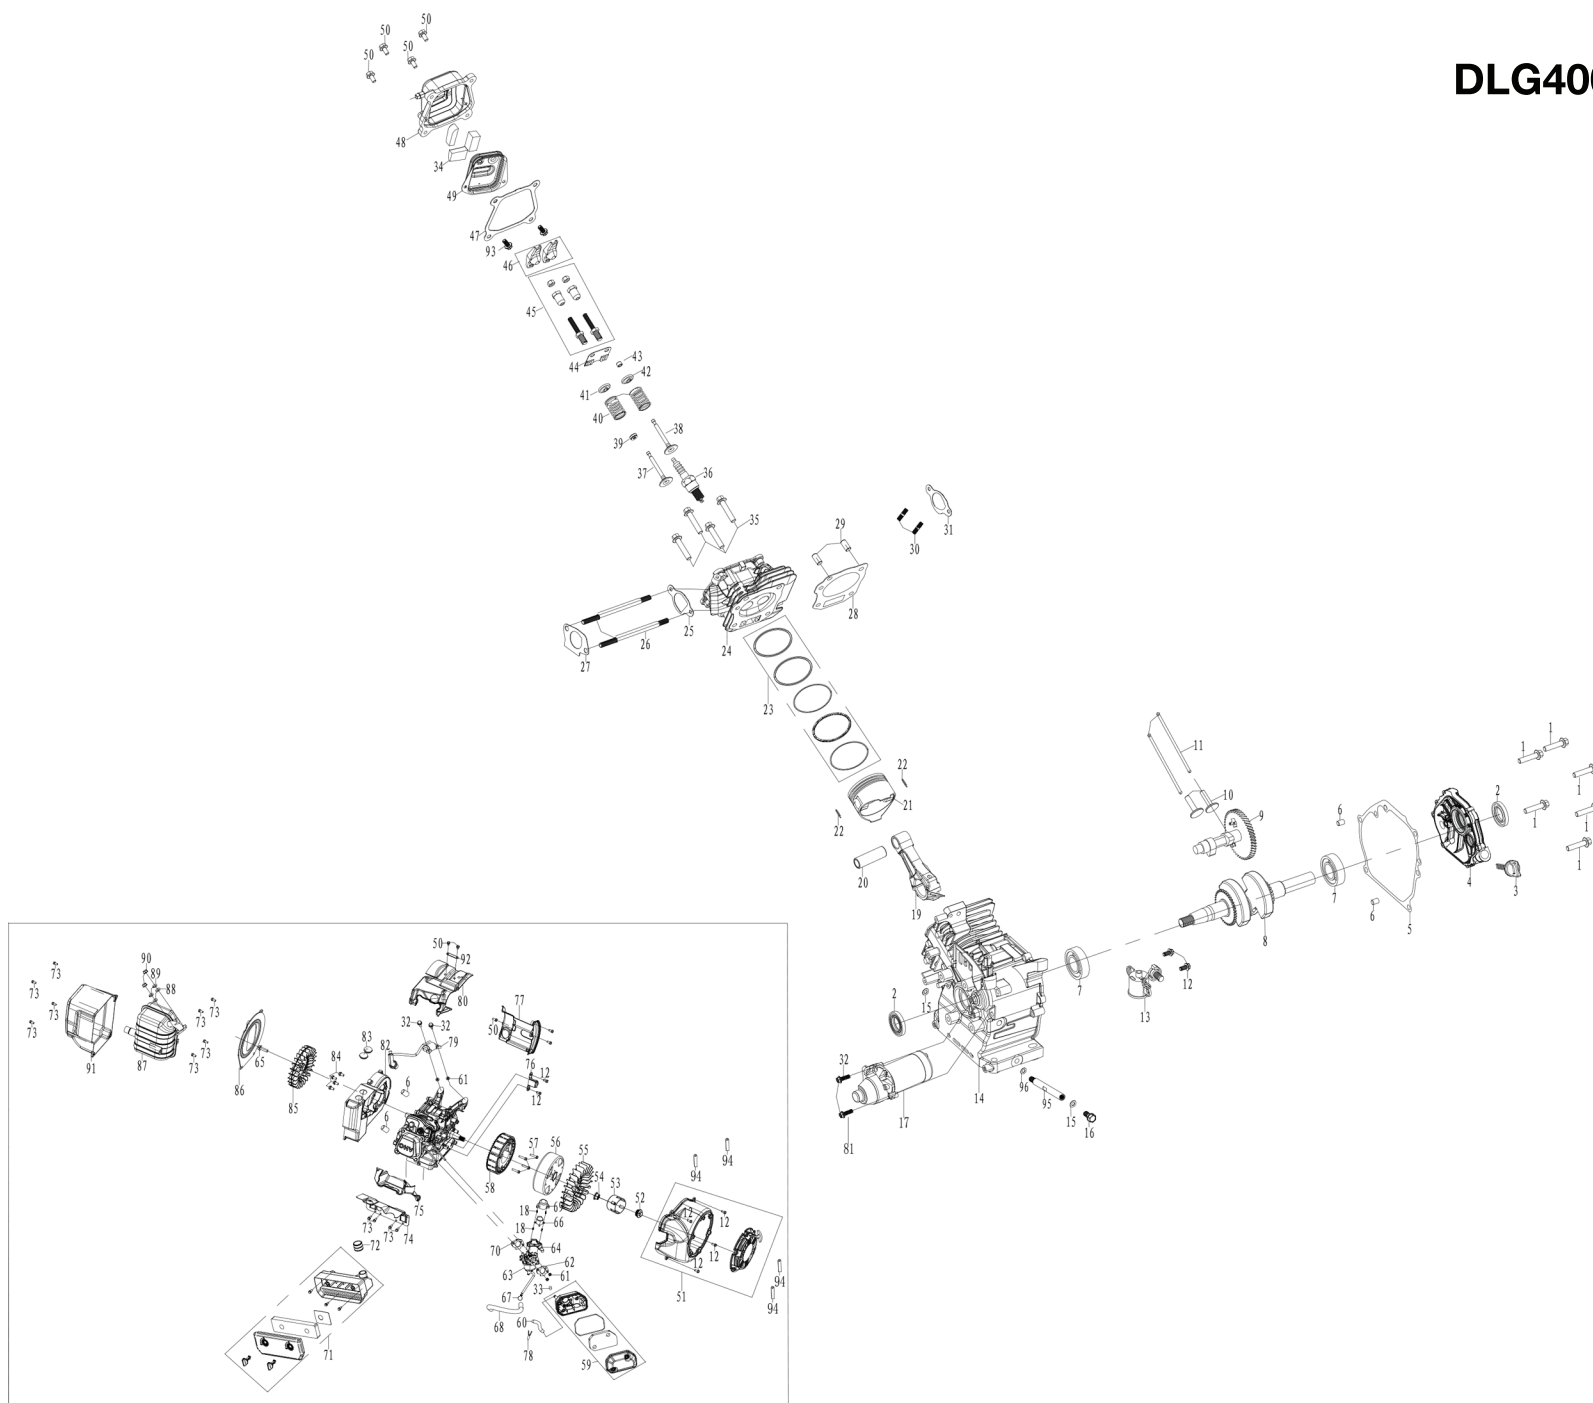

Spare parts for the DLG4000iSE (DHLG225) gasoline engine			
NO.	Code	Description	Qty
1	91347	BOLT M8X30	6
2	93507	CRANKCASE OIL SEAL	2
3	245601-313	DIPSTICK ASSEMBLY	1
4	330101	CRANKCASE COVER	1
5	96293	CRANKCASE SEAL WASHER	1
6	240904	CRANKCASE LOCATING PIN	4
7	93010	AXLE BEARING	2
8	240364	CRANKSHAFT ASSEMBLY	1
9	332003	CAMSHAFT ASSEMBLY	1
10	246103	VALVE LIFTER	2
11	241901	PUSH ROD	2
12	91329	BOLT M6X16	8
13	245113	OIL SENSOR ASSEMBLY	1
14	330208	CRANKCASE	1
15	94007	OIL DRAIN BOLT WASHER	2
16	91816	OIL DRAIN BOLT	1
17	97431	STARTING MOTOR ASSEMBLY	1
18	92217	SCREW M4*8	4
19	331500	CONNECTING ROD ASSEMBLY	1
20	245503	PISTON PIN	1
21	241211	PISTON	1
22	241301	PISTON PIN RING	2
23	241607	PISTON RING ASSEMBLY	1
24	331001	CYLINDER HEAD	1
25	96182	AIR INTAKE GASKET	1
26	91029	AIR INLET STUD STUD BOLT	2
27	96051	CARBURETOR GASKET	1
28	96058	CYLINDER HEAD GASKET	1
29	240905	CYLINDER HEAD LOCATING PIN	2
30	91007	AIR EXHAUST STUD STUD BOLT	2
31	96055	EXHAUST SEAL WASHER	1
32	91333	BOLT M6*28	3
33	249919	PLUG	1
34	339915	POLYURETHANE SCREEN	3
35	91359	BOLT M8X60	4
36	97109	SPARK PLUG	1
37	241704	INTAKE VALVE	1
38	245904	EXHAUST VALVE	1
39	241806	AIR INLET SPRING LOWER SEAT	1
40	246001	VALVE SPRING	2
41	241801	INTAKE VALVE SPRING SEAT	1
42	241802	AIR INLET SPRING SEAT	1
43	241804	TOP CAP	1
44	242202	VALVE RETAINER ASSEMBLY	1
45	91818	ROCKING ARM TIGHTENING BOLT	2
46	242101	ROCKING ARM	2
47	96200	HEADCOVER SEAL WASHER	1
48	241115	CYLINDER HEAD COVER	1
49	241116	INNER COVER OF CYLINDER HEAD COVER	1

50	91325	BOLT M6X12	9
51	330501	STARTER ASSEMBLY	1
52	91864	BOLT	1
53	334501	STARTER PULLY	1
54	90003	NUT M14	1
55	334601	IMPELLER	1
56	500191	ROTOR	1
57	91400	BOLT M6X60	4
58	503726	STATOR	1
59	337001	RESONANT CAVITY ASSEMBLY	1
60	95602	BLAST PIPE	1
61	90016	NUT M6	4
62	94229	SPACER,CARBURETOR	1
63	332825	CARBURETOR ASSEMBLY	1
64	249915	STEP MOTOR SEAT	1
65	91419	BOLT M8*1*25	1
66	DUPDJ168F-33142-A	STEPPER MOTOR	1
67	599302	LOW PRESSURE HOSE HOOP	1
68	517906	LOW PRESSURE HOSE	1
69	249916	SHIELDING	1
70	332301	CARBURETOR CONNECTION BLOCK	1
71	332901	AIR CLEANER ASSEMBLY	1
72	95918	CONNECTING PIPE	1
73	91330	BOLT M6X20	12
74	249917	BRACKET	1
75	240511	SHIELD	1
76	503697	TRIGGER	1
77	330503	WIND-LEAD-COVER	1
78	94407	CLIP,FUEL LINE	1
79	339909	IGNITION	1
80	330502	UPPER WIND-LEAD-COVER	1
81	91334	BOLT M6X30	1
82	244306	CENTRIFUGAL FAN HOUSING.	1
83	244304	CENTRIFUGAL HOOD PLUG	2
84	91343	BOLT M8*16	4
85	244606	IMPELLER	1
86	334302	CENTRIFUGAL FAN COVER	1
87	243740	MUFFLER ASSEMBLY	1
88	94216	SPARK ARRESTER	2
89	94206	SPRING WASHER	2
90	90011	NUT M8	2
91	500057	MUFFLER COVER	1
92	249914	WIRE CLIP	1
93	91322	BOLT M5*12	2
94	599601	METAL CLAMP	4
95	91831	OIL DRAIN SOLENOID	1
96	94035	OIL DRAIN BOLT WASHER	1